


Audi A6

Current Flow Diagram

No. 1 / 26

Convenience system central control unit, Left brake light bulb, Left reversing light bulb, Left brake and tail light bulb

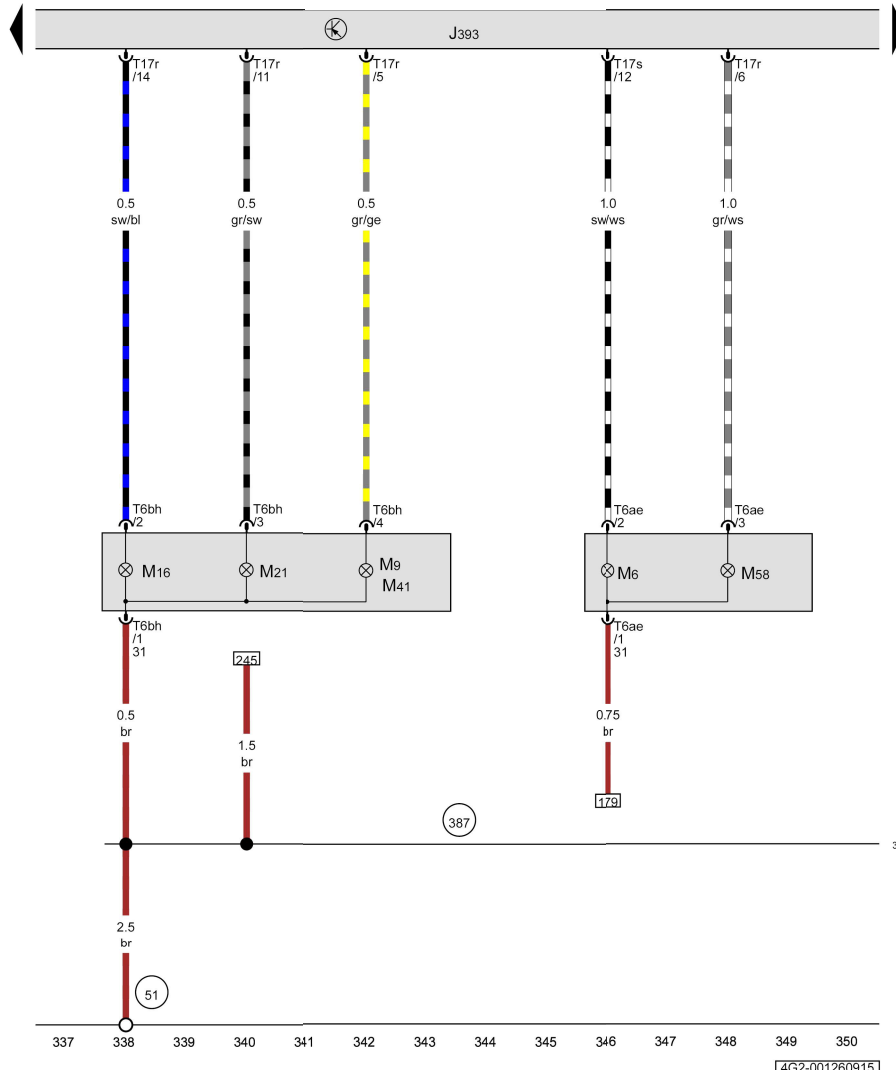


- J393 - Convenience system central control unit
- M6 - Rear left turn signal bulb
- M9 - Left brake light bulb
- M16 - Left reversing light bulb
- M21 - Left brake and tail light bulb
- M41 - Left tail light and rear fog light bulb
- M58 - Left brake and tail light bulb 2
- T6ae - 6-pin connector
- T6bh - 6-pin connector
- T17r - 17-pin connector
- T17s - 17-pin connector
- 51 - Earth point, on right in luggage compartment
- 387 - Earth connection 22, in main wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A6

Current Flow Diagram

No. 1 / 27

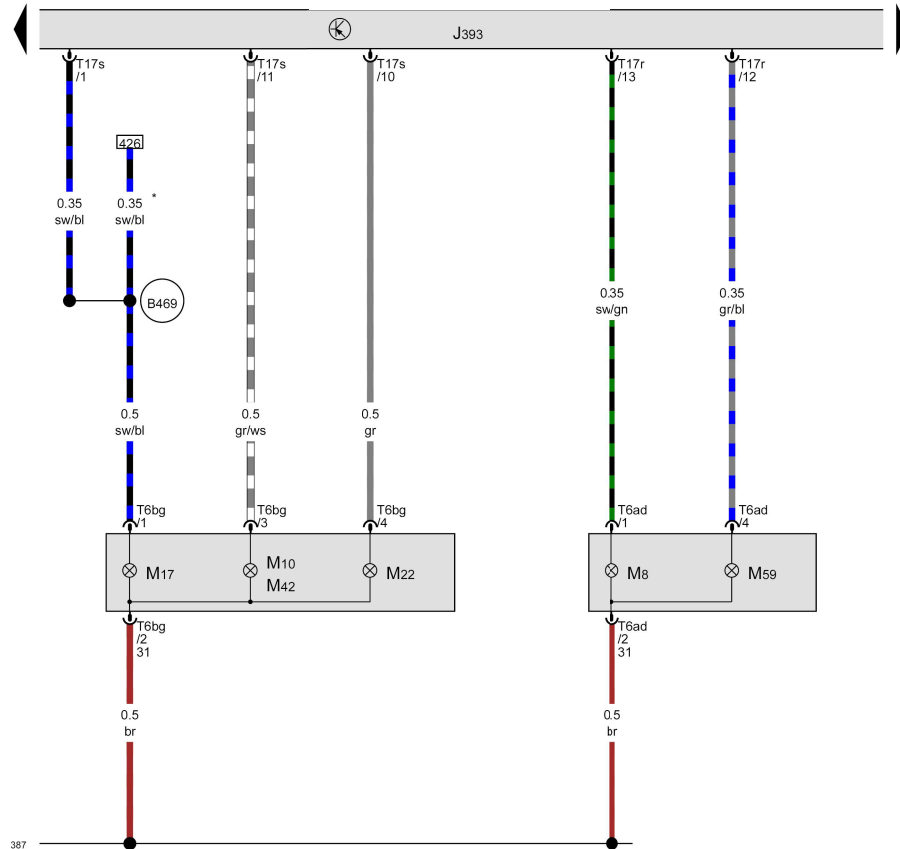

Convenience system central control unit, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb, Right tail light and rear fog light bulb

- J393 - Convenience system central control unit
- M8 - Rear right turn signal bulb
- M10 - Right brake light bulb
- M17 - Right reversing light bulb
- M22 - Right brake and tail light bulb
- M42 - Right tail light and rear fog light bulb
- M59 - Right brake and tail light bulb 2
- T6ad - 6-pin connector
- T6bg - 6-pin connector
- T17r - 17-pin connector
- T17s - 17-pin connector
- 387 - Earth connection 22, in main wiring harness
- B469 - Connection 5, in main wiring harness
- * - Only models with no main beam assist function

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink