



**G28      Engine speed (RPM) sensor**

- on transmission housing, left-side, near drive flange (shown with shield removed)
- bulkhead harness connector, see connector –T3w–