



- G2 - Engine Coolant Temperature (ECT) Sensor
- G28 - Engine Speed (RPM) Sensor
- G40 - Camshaft Position (CMP) Sensor
- G62 - Engine Coolant Temperature (ECT) Sensor
- G163 - Camshaft Position (CMP) Sensor 2
- J217 - Transmission Control Module (TCM)
- J220 - Motronic Engine Control Module (ECM)
- T3w - Connector 3 pin, grey, on engine speed sensor
- T10p - Connector 10 pin, black, connector station electronic box plenum chamber

- (220) - Ground connection (sensor ground), in engine compartment wiring harness
- (269) - Ground connector (sensor ground) -1-, in instrument panel wiring harness
- (316) - Sensor Ground Connection 2 (in engine wiring harness)
- (D75) - Plus connection -2- (30), in engine compartment wiring harness
- (D141) - Connector (5V), in wiring harness, engine pre-wiring
- \* - Vehicles with automatic transmission multitronic 01J