

Audi > C5 > 1998-2005
5 Spd. Automatic Transmission 01L All Wheel Drive
37 - Selector mechanism, servicing

Ignition switch key lock, checking

- Turn ignition key to run position (ignition on).
- Press and hold brake pedal.
- * When button in selector lever handle is pressed it must be possible to move selector lever out of position "P" without "catching" .
- * It should not be possible to remove the ignition key when selector lever is in any other position than "P" .
- Place selector lever in position "P" .
- * It must be possible to move ignition key to removal position without "sticking" .
- Remove ignition key.
- * Selector lever cannot be shifted out of "P" position with button pressed and brake pedal depressed.

If ignition key removal lock does not function as described, locking cable must be adjusted .