


Cooling system components

Coolant hose connection diagram

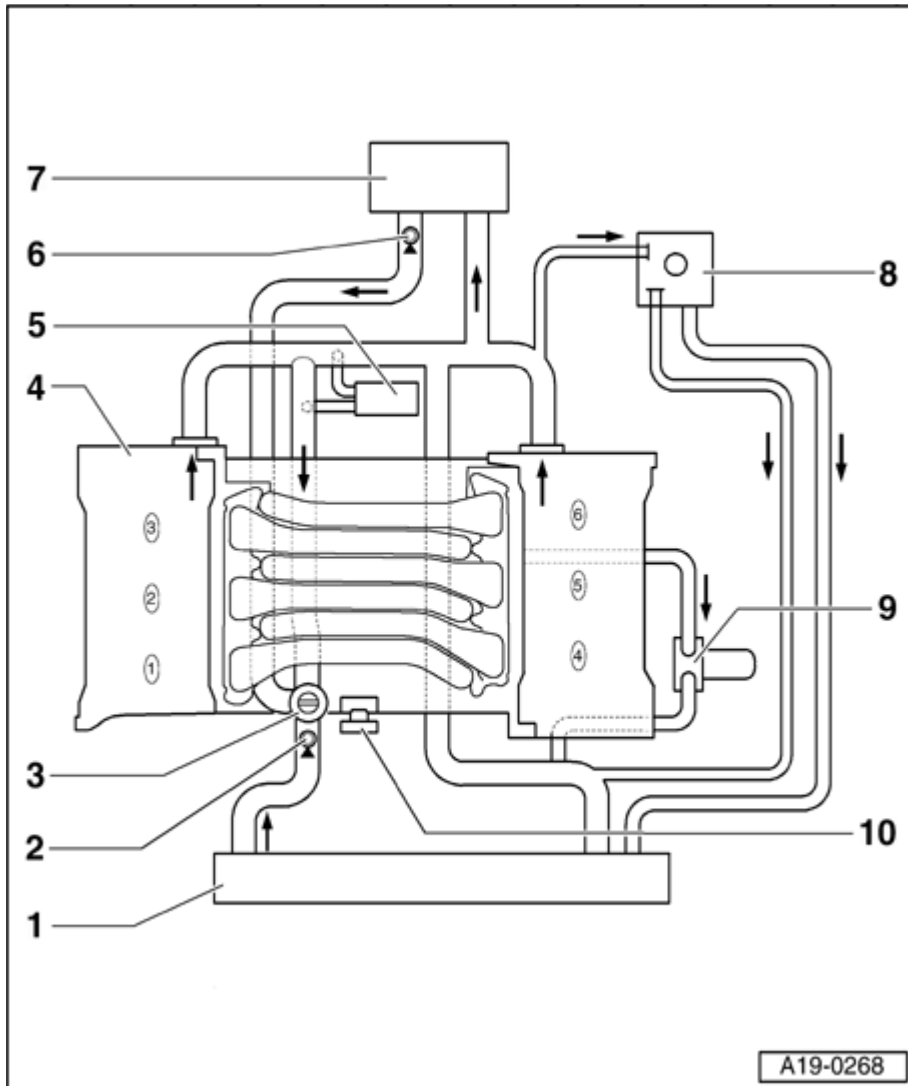

1 - Radiator

✦ Removing- and installing ⇒ [Radiator, removing and installing](#)

✦ After replacing, replace coolant

2 - Bleeder screw, 15 Nm

3 - Coolant thermostat

✦ Removing and installing [Coolant thermostat, removing, installing and checking](#)

- ◆ Checking

4 - Cylinder head/cylinder block

- ◆ After replacing, replace coolant

5 - Throttle valve control module J338

6 - Bleeder hole

- ◆ At coolant hose to heater core

7 - Heater core

- ◆ After replacing, replace coolant

8 - Expansion tank

- ◆ With cap
- ◆ Pressure relief valve in cap, checking

9 - Oil cooler

10 - Coolant pump

- ◆ Removing- and installing ⇒ [Coolant pump, removing and installing](#)
- ◆ Check for ease of movement