



- G - Fuel Level Sensor
- G 1 - Fuel Gauge
- G 3 - Engine Coolant Temperature (ECT) Gauge
- G 5 - Tachometer
- G 6 - Fuel Pump (FP)
- G 8 - Engine Oil Temperature Sensor
- G 9 - Engine Oil Temperature Gauge
- G 14 - Voltmeter
- G 21 - Speedometer
- G 22 - Speedometer Vehicle Speed Sensor (VSS)
- G 169 - Fuel Level Sensor 2
- G 237 - Fuel Level Sensor 3
- H 3 - Warning Buzzer
- J 218 - Instrument Cluster Combination Processor
- T 2 ai - Connector 2 pin, black, oil sensor
- T 6 a - Connector 6 pin, blue, connector station A pillar, left
- T 10 f - Connector 10 pin, brown, connector station A pillar, left
- T 10 p - Connector 10 pin, black, connector station electronic box plenum chamber

- T 32 - Connector 32 pin, blue, on instrument cluster
- T 32 a - Connector 32 pin, green, on instrument cluster
- Y - Analog Clock
- (85) - Ground connection -1-, in engine compartment wiring harness
- (86) - Ground connection -1-, in rear wiring harness
- (269) - Ground connector (sensor ground) -1-, in instrument panel wiring harness
- (A8) - Plus connection (58d), in instrument panel wiring harness (Display illumination)
- (A108) - Wire connection (vehicle speed signal), in instrument panel wiring harness
- \* - Vehicles with front-wheel drive
- \*\* - Vehicles with all-wheel drive
- \*\*\* - Wiring inside fuel tank