

## Front Fender, Assembly Overview

### 1 - Fender

- Remove bumper [Chapter](#).
- Remove wheelhousing liner [Chapter](#).
- Remove end plate [Fig.](#)
- Remove headlights: [Electrical Equipment from MY 2001; Rep. Gr.94](#) or [Electrical Equipment through MY 2000; Rep. Gr.94](#)
- Disconnect harness connectors for side turn signals.
- Remove bolts [Item](#), [Item](#), [Item](#), [Item](#) and [Item](#).

### 2 - Bolt w/washer assembly

- q 10 Nm (7 ft lb)

### 3 - Bolt w/washer assembly (2x)

- q 10 Nm (7 ft lb)

### 4 - Bolt w/washer assembly

- q 10 Nm (7 ft lb)

### 5 - Bolt w/washer assembly

- q 10 Nm (7 ft lb)

### 6 - Bolt w/washer assembly

- q 15 Nm (11 ft lb)




#### Note

- t As a running change, the bolt w/washer assembly will change from hex-head to Torx®.
- t Bolt w/washer assemblies coated with locking fluid must always be replaced.

### 7 - Bracket

### 8 - Bolt w/washer assembly

- q 10 Nm (7 ft lb)

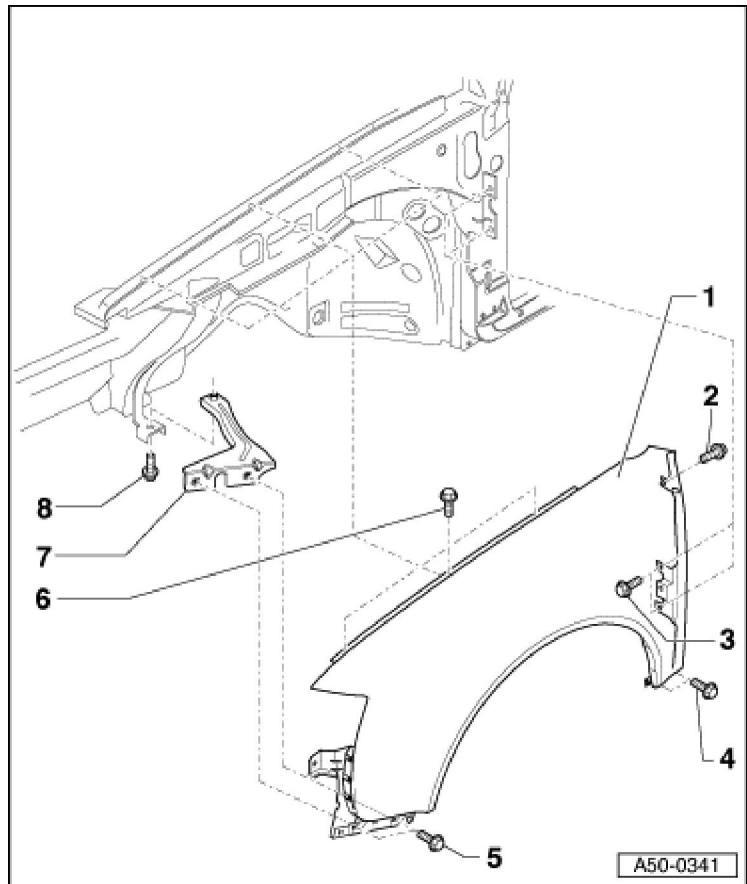

## Removing and installing end plate

- Remove front wheel.
- Remove wheelhousing liner.
- Remove bolts -1- from expanding clips -3- and remove plate -2- from fender -4-.

