

Actuator, Removing and Installing

Removing

- Remove actuator -1- from bracket -2-.

Tightening torque: 25 Nm (18 ft lb).

- Remove vacuum line.
- Disconnect linkage from actuator.

Installing

- Install in reverse order of removal.

