

## Cruise Control Vacuum Pump, Removing and Installing

### Removing

The cruise control vacuum pump is located under the ABS hydraulic control unit -5- and can be removed outward after the left wheelhousing liner is removed.

- Remove securing nuts -3- and remove unit out to left through wheel housing.

Tightening torque: 5 Nm (44 in. lb)

- Pull vacuum pump -1- upward off bracket -2- complete with rubber mountings.

4 - Hose routing to actuator (-arrow-)

### Installing

- Install in reverse order of removal.

