


**8-Fold Relay Panel behind the storage – driver's side, behind Micro central Electric Panel (up to m.y. 2000)**

1	open
2	Second Speed Coolant Fan Control (FC) Relay
3	Coolant Fan Control (FC) Relay
4	open
5	open
6	open
7	open
8	open

14	Power Seat Circuit Breaker 1, Driver's Seat
15	Fuse for luggage Compartment Socket
16	Power Window Circuit Breaker Front
17	Power Window Circuit Breaker Rear
18	Fuse 1 for control module – ABS
19	Coolant Fan Fuse
20	Coolant Fan Fuse
21	Control module fuse for coolant fan
22	open
23	open
24	Power Seat Circuit Breaker 2, Passenger's Seat

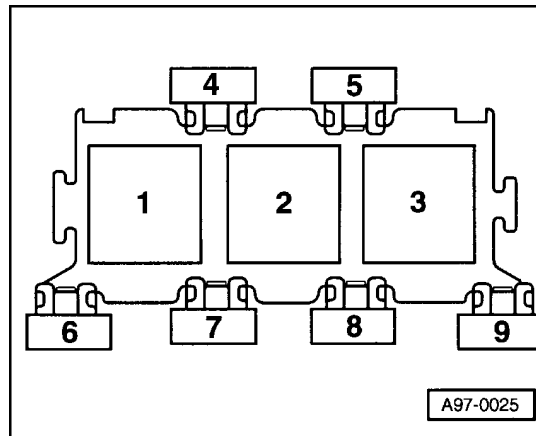

**3 Fold Relay Panel in E-Box plenum chamber (up to m.y. 2000)**

1	open
2	Secondary Air Injection (AIR) Pump Relay
3	open
4	open
5	open
6	open
7	Fuse for secondary air pump, from november 1998
8	open
9	open