

High-Mount Brake Lamp, Avant, Removing and Installing



WARNING

Disconnect the battery Ground (GND) strap before working on the electrical system:



Note

- t Before disconnecting the battery, determine the correct coding for the anti-theft radio.
- t After re-connecting the battery, activate the vehicle's electrical equipment (radio, clock, power window regulators) according to the operating instructions.

Removing

- Carefully remove both caps -2- from left and right of brake light -1-.
- Remove both screws -3-.



Note

- t Make sure that the seal on the brake light is not damaged.
- t If the light is faulty, completely replace.
- To remove, press brake light tabs -4- and remove lamp toward rear out from opening.
- Replace brake light after disconnecting harness connector.

Installing

- Install in reverse order of removal.

