



## Removing and installing hazard warning light switch -E3-

### Special tools and workshop equipment required

- ◆ Removal wedge -3409-

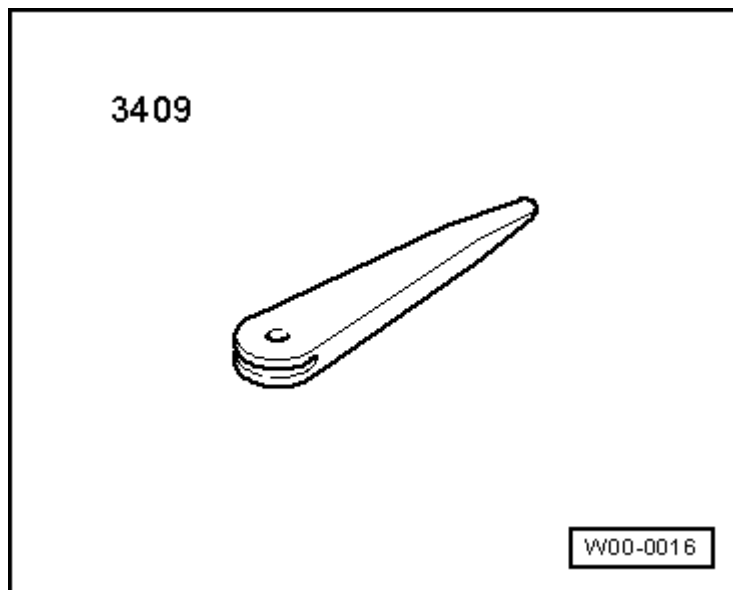

- ◆ Hook -3438- (2x)

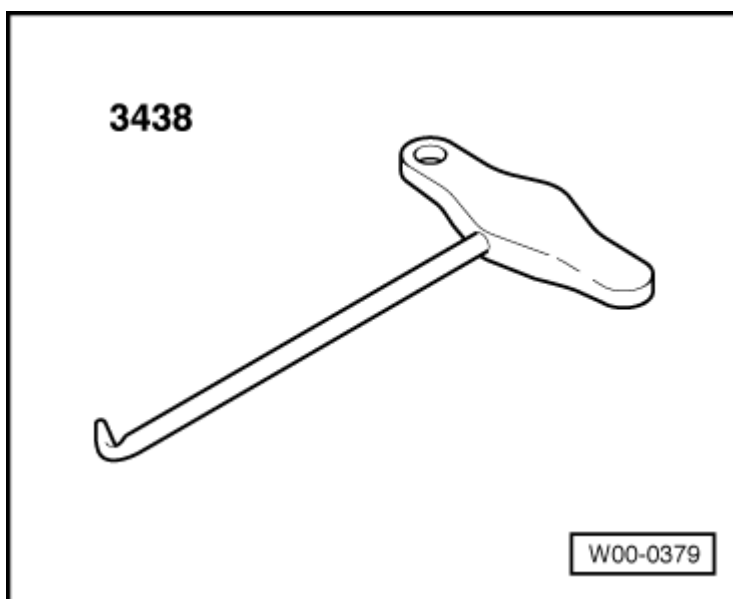

### Removing

- Move steering wheel down and to rear as far as possible, making use of full range of steering column adjuster.
- Switch off ignition and take out ignition key.
- Carefully release the spring tab -1- for trim panel from the dash panel using the removal wedge -3409-.




#### Note

*The dash panel vent has a hole on both sides for engaging the hook -3438-.*


- Use hook -3438- to carefully pull dash

panel vent out of mounting on both sides.

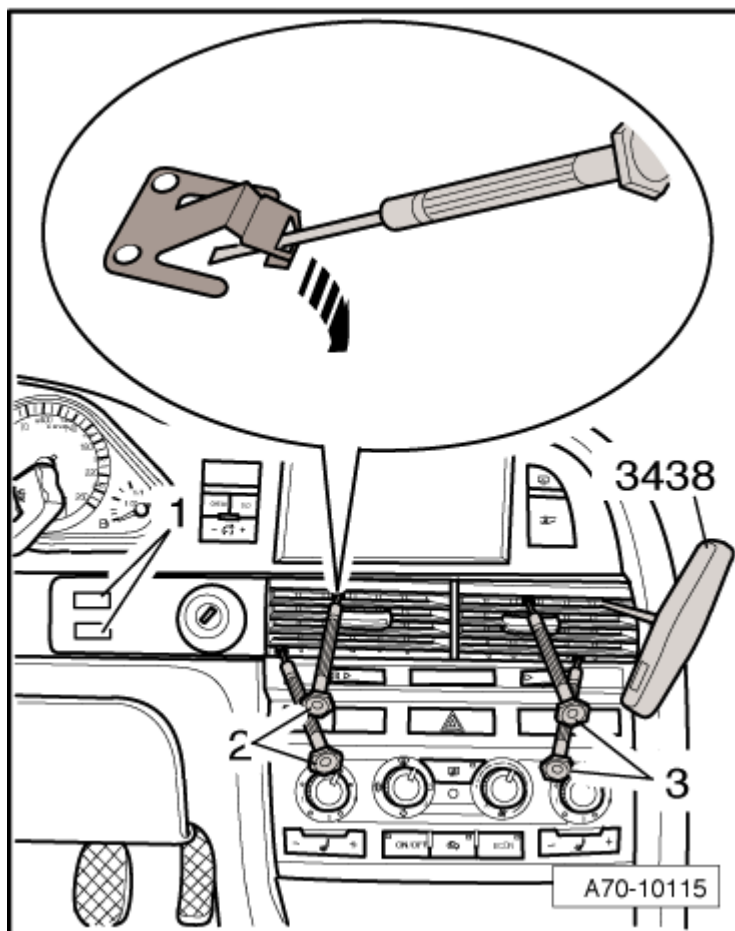


If it is not possible to pull out dash panel vent as described, perform the following procedure:

- Remove Climatronic control unit -J255- (operating and display unit) → Rep. Gr.87.
- Release spring pins -arrows- at underside of dash panel vent -1-.

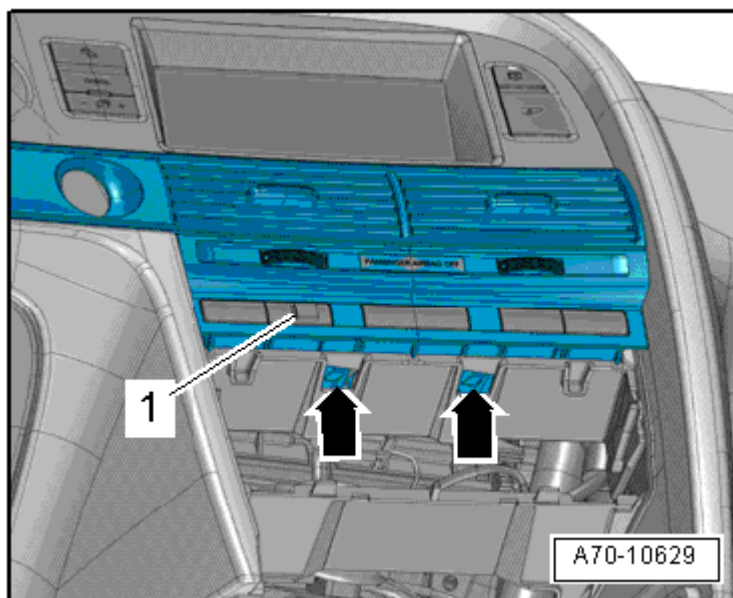

- Place the dash panel vents in a horizontal position.
- Release all retaining clips -arrow- by inserting jeweller's screwdrivers -2- and -3-.
- Pull the dash panel air vent out of the mounting on both sides using the hooks -3438- (the jeweller's screwdrivers remain inserted).

- Unplug the electrical connectors.

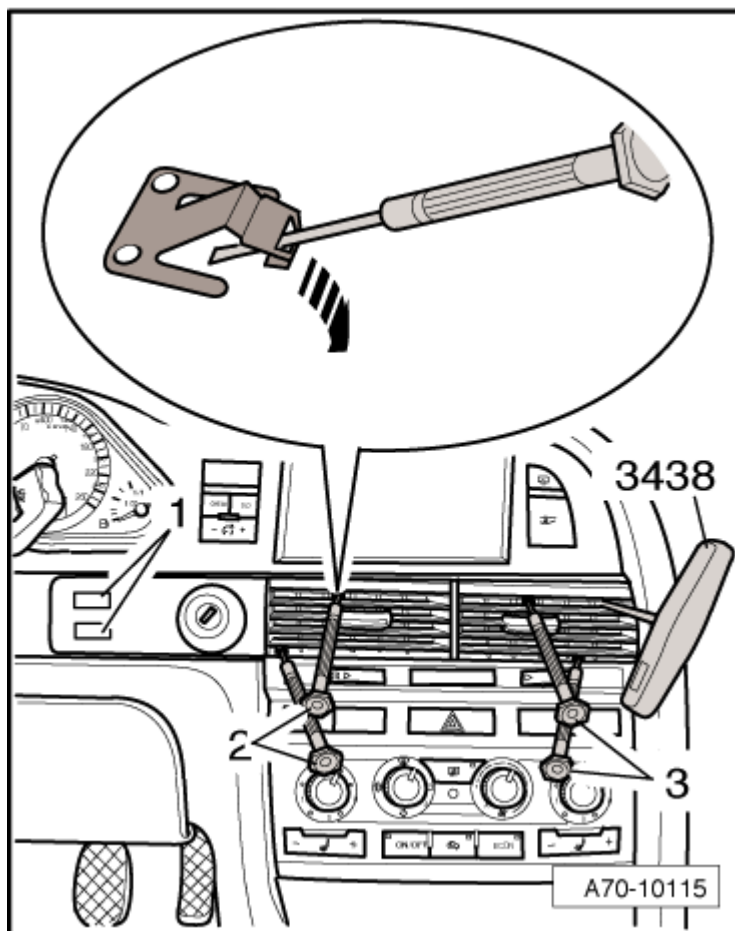

- Press the hazard warning light switch -E3-- item 1- out of air vent trim -arrow-.

**Installing**

Installation is carried out in the reverse order; note the following:

- Press switch into switch housing until catch engages.

