


Oil Pressure Switch -F1-, removing and installing

Removing


- Remove rear engine cover -arrows-.

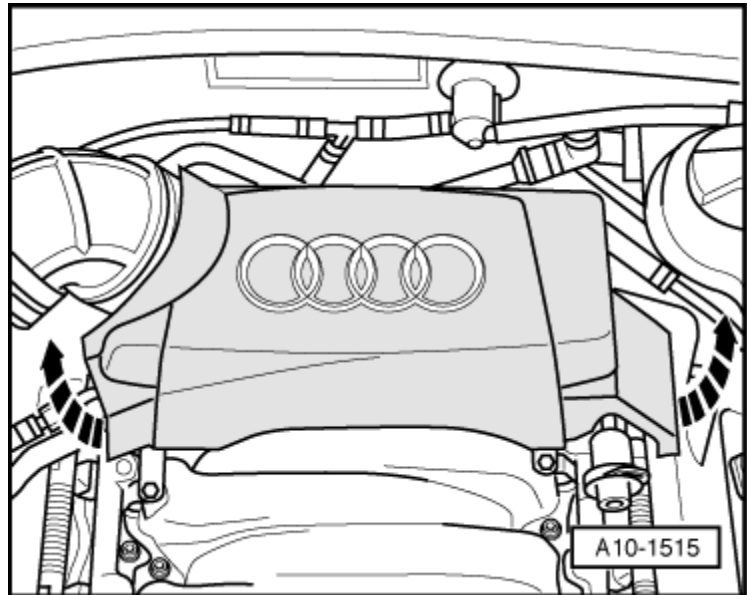

- Remove coolant expansion tank -arrow-.
- Disconnect electrical connection from Engine Coolant Level (ECL) Warning Switch -F66- at bottom of coolant reservoir and set aside coolant reservoir with coolant hoses -1- and -2- connected.

Note

Place a rag under oil filter housing to catch escaping engine oil.

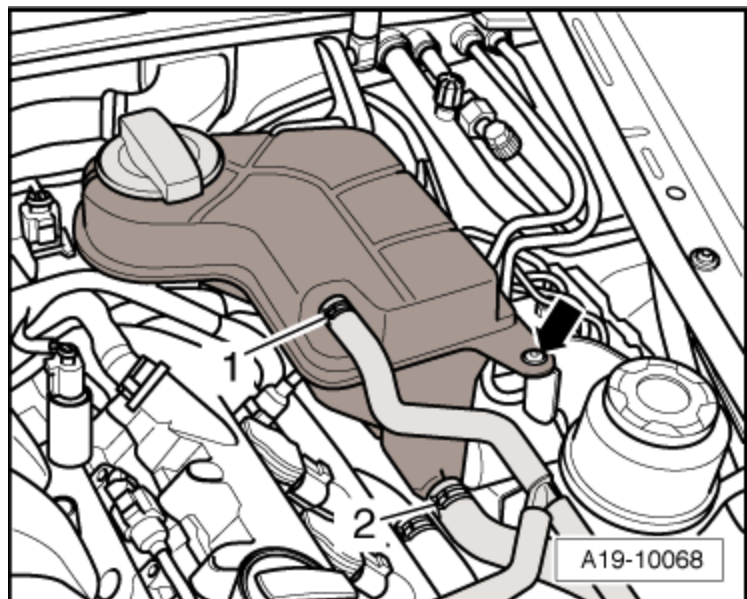

- Disconnect electrical harness connector from Oil Pressure Switch -F1--arrow-.
- Remove oil pressure switch.


Installing

Installation is in reverse order of removal, note the following:

Note

Replace seal.

- Check oil level → Chapter.

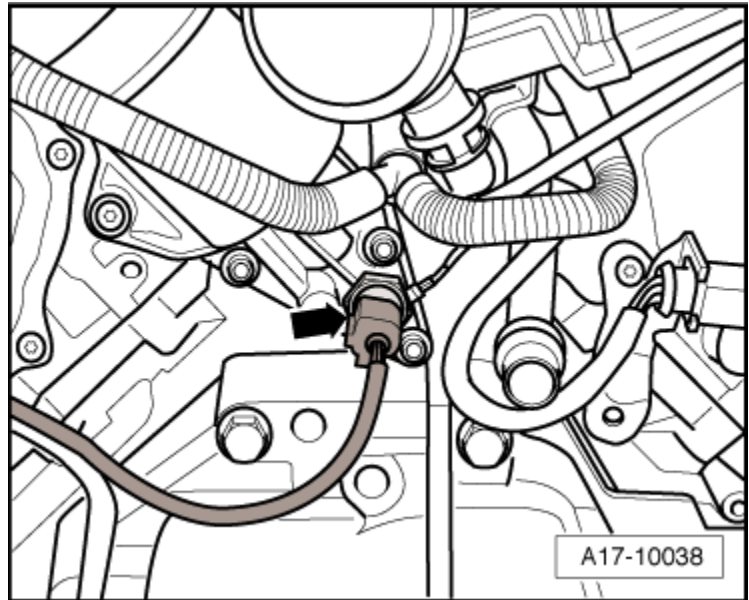Torque specifications

Component	Nm
Oil pressure switch to oil filter housing	20