



Torque Support, Removing and Installing

Removing

- Remove noise insulation. Refer to [→ Body Exterior; Rep. Gr.50](#).

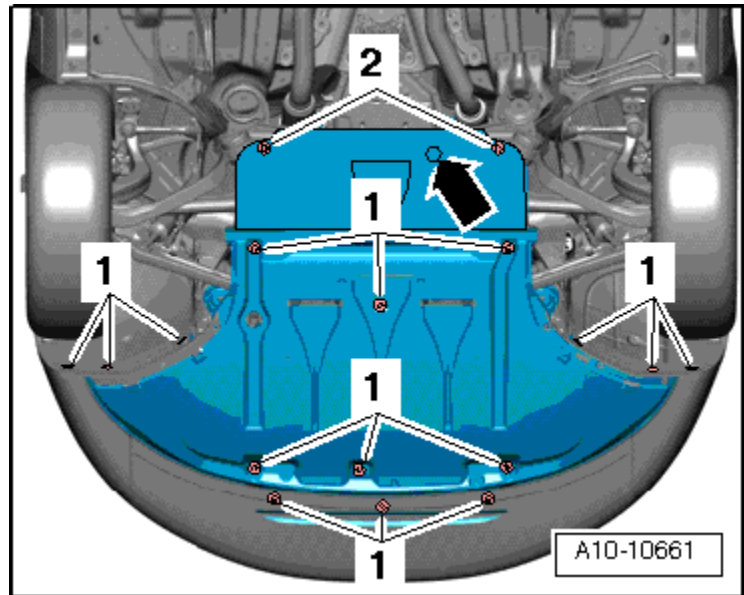

- Remove the bolts -arrows- and remove the torque support from the engine.

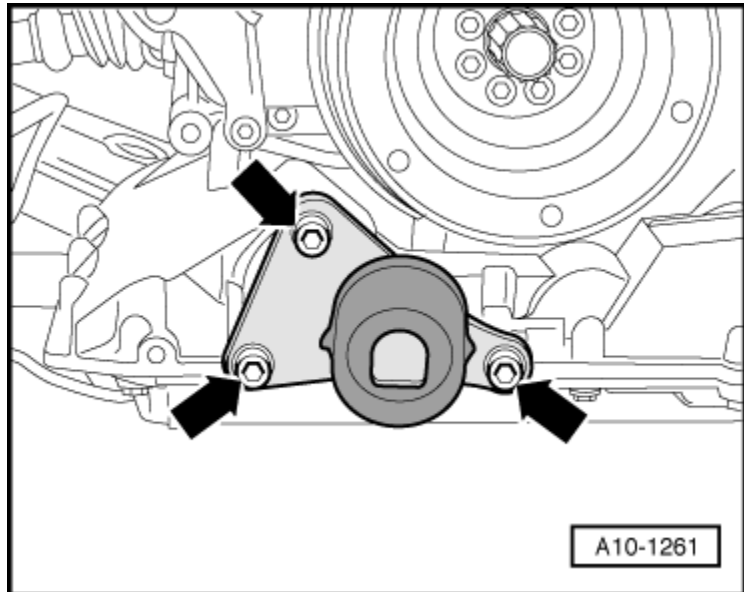

Installing

1 Tightening specifications [→ Chapter](#).

Installation is performed in reverse order of removal, noting the following:

- Allow torque support stop to come in contact under its own weight with torque support rubber buffer and tighten screws.
- Install the noise insulation. Refer to [→ Body Exterior; Rep. Gr.50](#).

