


## Light Switch

### Removing

**⚠ Caution**

- t **Switch off all electrical components.**
- t **Switch ignition off and remove ignition key.**

- Turn lamp switch into "0" position.
- Pry off left cover from instrument panel using a screwdriver -arrow-.

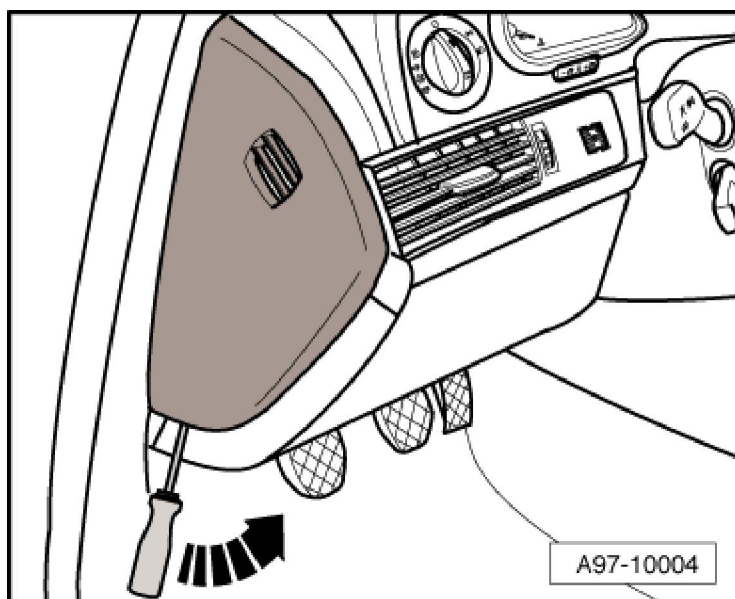

- Remove spreader pin -2- at air guide -1- and remove air guide.
- Reach through opening above instrument panel vent from the side and press light switch -3- out of instrument cluster -arrow-.
- Disconnect electrical harness connector.

### Installing

Installation is performed in reverse order of removal, noting the following:

- Press the switch into the switch housing until lock mechanism engages.

