

Radio System, Component Location Overview

Caution

- ◆ *Be aware that some "live" cross-references appearing in this section link to information and procedures located in the section for radio systems applicable to Europe.*
- ◆ *Even though European radio systems are named differently, they are technically equivalent to USA and Canada radio systems and consequently the information and procedures are also valid for USA and Canada radio systems.*

1 - Loudspeaker in instrument panel


- Left Front Midrange Speaker -R26- /Right Front Midrange Speaker -R27- /Center Mid/High Range Speaker - R158-
- Removing and installing
→ Chapter
- BANG and OLUFSEN: Left Front Treble Speaker -R20- /Center Mid/High Range Speaker - R158- /Right Front Treble Speaker -R22-
- Removing and installing
→ Chapter

2 - Media Player, Position 1 -R118-

- In glove compartment
- CD Changer -R41-
- Connector assignment
→ Chapter
- Removing and installing
→ Chapter

- Media Player, Position 2 -R119-

- In glove compartment
- CD Changer -R41-

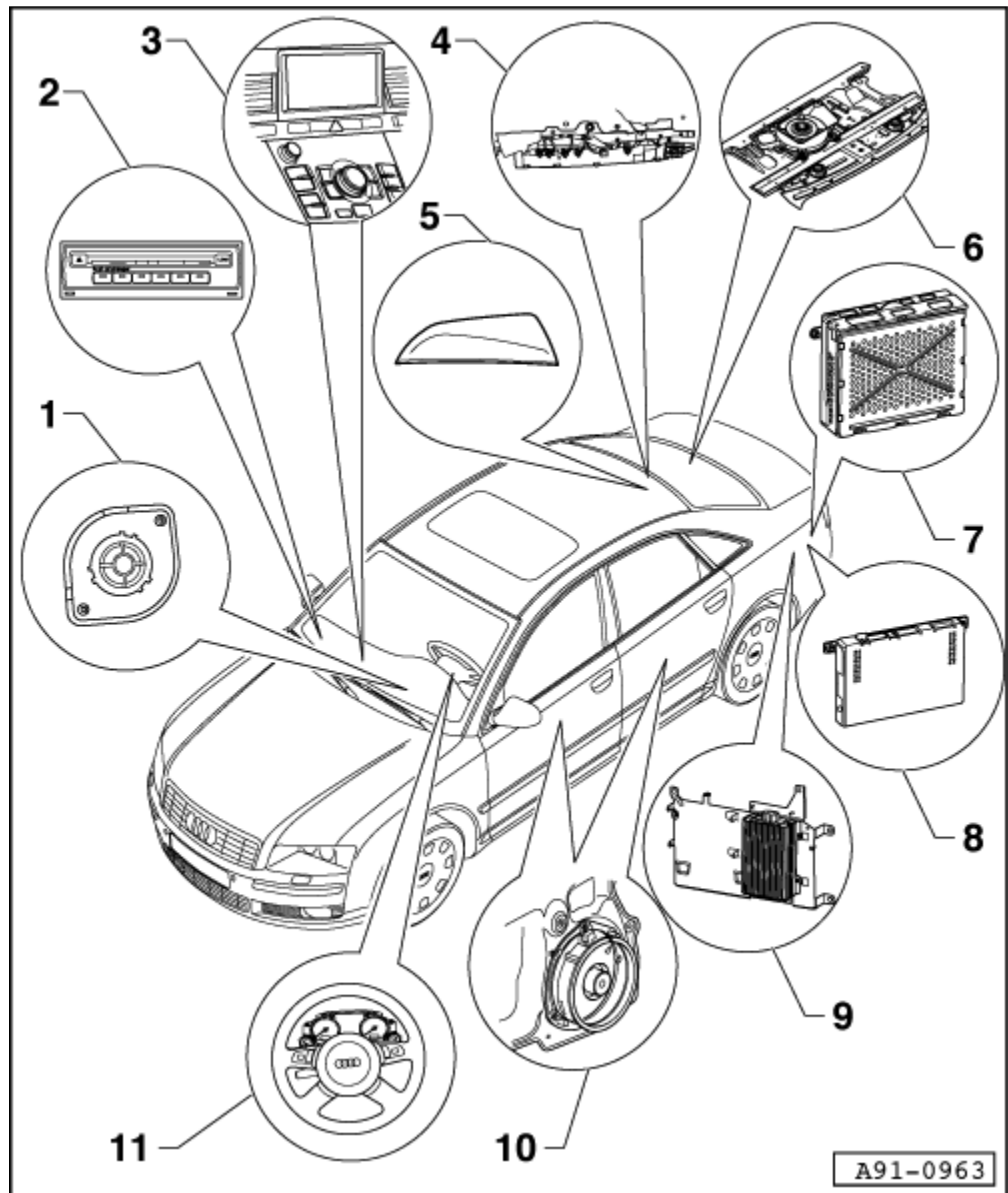

- ❑ Connector assignment → [Chapter](#)
- ❑ Removing and installing → [Chapter](#)

3 - Front Information Display Control Head -J685-

- ❑ In center of instrument panel

Multimedia Control Head -E380-

- ❑ In center console, bottom
- ❑ Connector assignment → [Chapter](#)
- ❑ Removing and installing → [Chapter](#)

4 - Antenna Amplifier -R24-

- ❑ Behind left roof end trim
- ❑ Connector assignment → [Chapter](#)

5 - Radio, Telephone, Navigation System Antenna -R52-

- ❑ Ter/Sat/GPS/GSM-emergency (up to 10/06)
- ❑ Sat/GPS/GSM-emergency (as of 11/06)
- ❑ Roof antenna
- ❑ Removing and installing → [Chapter](#)

6 - Subwoofer (on rear shelf)

- ❑ Subwoofer (on rear shelf) -R157- in center
- ❑ Speaker (in shelf) -R150- left and right at rear
- ❑ Removing and installing → [Chapter](#)
- ❑ BANG and OLUFSEN: Left Rear Midrange Speaker -R105-/Subwoofer (on rear shelf) -R157-/Right Rear Midrange Speaker -R106-
- ❑ Removing and installing → [Chapter](#)

7 - Radio -R-

- ❑ Behind luggage compartment left side trim
- ❑ Connector assignment → [Chapter](#)
- ❑ Removing and installing → [Chapter](#)

8 - Satellite Radio -R146-

- ❑ Behind luggage compartment left side trim
- ❑ Connector assignment → [Chapter](#)
- ❑ Removing and installing, up to model year 05 → [Chapter](#)
- ❑ Removing and installing, as of model year 06 → [Chapter](#)
- ❑ Removing and installing with RSE light → [Chapter](#)

9 - Digital Sound System Control Module -J525-

- ❑ Behind luggage compartment left side trim
- ❑ BOSE® connector assignment → [Chapter](#)
- ❑ Removing and installing BOSE®, up to model year 05 → [Chapter](#)
- ❑ Removing and installing BOSE®, as of model year 06 → [Chapter](#)
- ❑ BOSE® 6000 connector assignment → [Chapter](#)
- ❑ Removing and installing 6000 → [Chapter](#)
- ❑ BANG and OLUFSEN, connector assignments → [Chapter](#)

- ❑ BANG and OLUFSEN, removing and installing → [Chapter](#)
- Digital Sound System Control Module 2 -J787-**
- ❑ Only with BANG and OLUFSEN
- ❑ Behind luggage compartment left side trim
- ❑ Connector assignment → [Chapter](#)
- ❑ Removing and installing → [Chapter](#)

10 - Loudspeaker in doors

- ❑ Left Front Bass Speaker -R21-/Right Front Bass Speaker -R23- at bottom in front doors
- ❑ Left Rear Mid/Low Range Speaker -R159-/Right Rear Mid/Low Range Speaker -R160- at bottom in rear doors
- ❑ Left Rear Treble Speaker -R14-/Right Rear Treble Speaker -R16- at top in rear doors
- ❑ Removing and installing → [Chapter](#)
- ❑ BANG and OLUFSEN: Left Front Bass Speaker -R21-/Right Front Bass Speaker -R23- at bottom in front doors
- ❑ Left Front Midrange Speaker -R103-/Right Front Midrange Speaker -R104- in front doors, center
- ❑ Left Rear Treble Speaker -R14-/Right Rear Treble Speaker -R16- at top in rear doors
- ❑ Left Rear Mid/Low Range Speaker -R159-/Right Rear Mid/Low Range Speaker -R160- at bottom in rear doors
- ❑ Removing and installing → [Chapter](#)

11 - Multifunction Steering Wheel

- ❑ Removing and installing buttons → [Chapter](#)