



Audi Workshop Manuals

[AdChoices](#)
[\[PREV PAGE\]](#) [\[NEXT PAGE\]](#)


8+1

 Search

[Privacy Policy](#)

Donate and help keep workshop manuals freely available.



[Other Audi Workshop Manuals](#)
[Other Makes](#)

[Audi A8 Quattro Sedan V8-4.2L \(BFM\) \(2005\)](#)
[Relays and Modules](#)
[Sensors and Switches](#)
[Maintenance](#)
[Engine, Cooling and Exhaust](#)
[Powertrain Management](#)
[Transmission and Drivetrain](#)
[Brakes and Traction Control](#)
[Starting and Charging](#)
[Power and Ground Distribution](#)
[Steering and Suspension](#)
[Heating and Air Conditioning](#)
[Restraint Systems](#)
[Accessories and Optional Equipment](#)
[Body and Frame](#)
[Body Control Systems](#)
[Bumper](#)
[Cabin Ventilation Grille](#)
[Cool](#)
[Doors, Hood and Trunk](#)
[Seats](#)
[Fuel Door](#)
[Hood](#)
[Trunk / Luggage](#)
[Power Trunk / Luggage Control Module](#)
[Power Trunk / Luggage Lock Actuator Position](#)
[Power Trunk / Luggage Lock Switch](#)
[Trunk / Luggage Hinge](#)
[Trunk / Luggage Interior Trim Panel](#)
[Trunk / Luggage Latch](#)
[Trunk / Luggage Lock](#)
[Trunk / Luggage Lock Cylinder](#)
[Trunk / Luggage Motor](#)
[Trunk / Luggage Release Lever](#)
[Trunk / Luggage Stop](#)
[Component Information](#)
[Technical Service Bulletins](#)
[Customer Interest for Trunk / Liffge](#)
[All Technical Service Bulletins for I](#)
[551110](#)
[Page 19006](#)
[>>Page 19007<<](#)
[Page 19008](#)
[Page 19009](#)
[Trunk / Luggage Switch](#)
[Exterior Moulding / Trim](#)
[Fender](#)
[Frame](#)
[Grille](#)
[Interior Moulding / Trim](#)
[Locks](#)
[Mirrors](#)
[Paint, Striping and Decals](#)
[Lock Carrier -> Radiator Support](#)
[Relays and Modules - Body and Frame](#)
[Roof and Associated Components](#)
[Seats](#)
[Sensors and Switches - Body and Frame](#)
[Sound Proofing / Insulation](#)
[Sparklers, Flaps, and Air Dams](#)
[Strut / Shock Tower](#)
[Tie Down Hook / Bracket](#)
[Trimbody](#)
[Weatherstrip](#)
[Cruise Control](#)
[Instrument Panel, Gauges and Warning Indicators](#)
[Lighting and Horns](#)
[Windows and Glass](#)
[Wiper and Washer Systems](#)
[Body and Frame](#) > [Doors, Hood and Trunk](#) > [Trunk / Luggage](#) > [Trunk / Luggage Stop](#) > [Component Information](#) > [Technical Service Bulletins](#) > [All Technical Service Bulletins for Trunk / Luggage Stop](#) > [551110](#) > Page 19007


Figure 4. Rubber cover and spring-loaded pin removed from the new bump stop assembly.

3. Remove the rubber cover and spring pin from the new spring-loaded [bump stop](#) assembly ([part number](#) 8H0 827 249 A).

Note:

Do not use metal pliers to unscrew the spring-loaded pin from the new part. The metal teeth will damage the soft plastic. Damage to the part will prevent the rubber cover from seating properly on the bump stop.



Figure 5. New spring-loaded pin installed.

4. Hand screw the new spring-loaded pin into the [trunk lid](#).

\$129.50
\$59.95

[Free car repair manuals](#) [Repair Manual](#) [Manuals](#) [Coil Springs](#) [Sedan](#) [Car repair manual](#) [Workshop Manuals](#)

[Background Images](#) [Service Bulletins](#) [Bulletins](#) [Free car repair manuals](#) [Repair Manual](#) [Manuals](#) [Coil Springs](#) [infolinks](#)

[Body and Frame](#) > [Doors, Hood and Trunk](#) > [Trunk / Luggage](#) > [Trunk / Luggage Stop](#) > [Component Information](#) > [Technical Service Bulletins](#) > [All Technical Service Bulletins for Trunk / Luggage Stop](#) > [551110](#) > Page 19007

[\[PREV PAGE\]](#) [\[NEXT PAGE\]](#)