

## Tank Door/Rear Lid Release Switch, Removing and Installing

### Removing

- Remove door trim [Chapter](#).
- Remove insulation [Chapter](#) and [Chapter](#).
- Remove hinged pocket with mount [Chapter](#).
- Remove bolts -1- (qty. 2).
- Remove cover -4-.
- Pry out switch -2- on right side and pull off switch -2-.
- Remove connector -3-.

### Installing

- Install tank lid/rear lid release switch in reverse order of removal.

