


1.3 Emergency Power Supply Connector Coupling, Pin Assignment

 Note

◆ For the seat forward/back adjustment motor and seat height adjustment motor emergency power supply, the pins on the emergency power supply connector coupling -2- must be supplied with current. Refer to the corresponding pins in the following list.

◆ When emergency power is supplied, the programming is lost and the seat must be adapted again see Guided Fault Finding: Adapting motors.

- 1: Seat forward/back adjustment minus switch
- 2: Seat forward/back adjustment plus switch
- 3: Seat height adjustment minus switch
- 4: Seat height adjustment plus switch
- 5: Seat forward/back adjustment minus motor
- 6: Seat forward/back adjustment plus motor
- 7: Seat height adjustment minus motor
- 8: Seat height adjustment plus motor

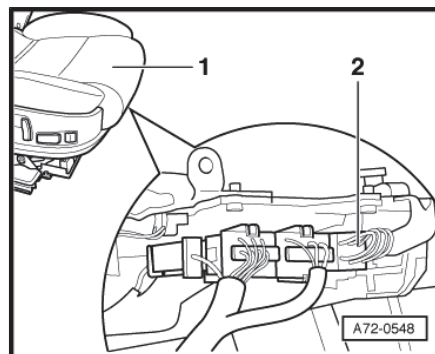

1.4 Front Passenger Seat Stop



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin