



Coolant Thermostat Housing

Removing

- Drain the coolant. Refer to → [Chapter „Cooling System, Draining and Filling“](#).
- Disconnect electrical connector -arrow- at engine coolant temperature sensor on radiator -G83-.

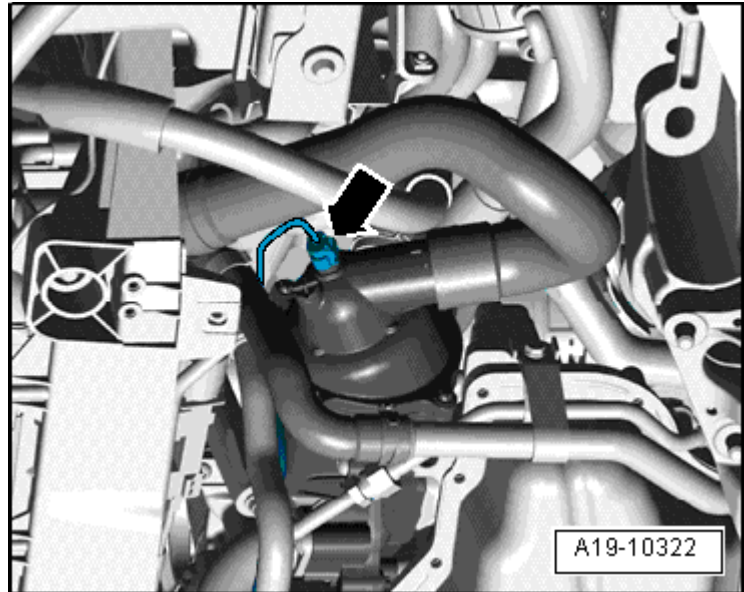

- Remove coolant hose -2- at bottom of coolant thermostat housing and drain remaining of coolant.
- Remove the bolts -arrows-.
- Remove coolant thermostat housing and remove coolant hose -1- from top of coolant thermostat housing.

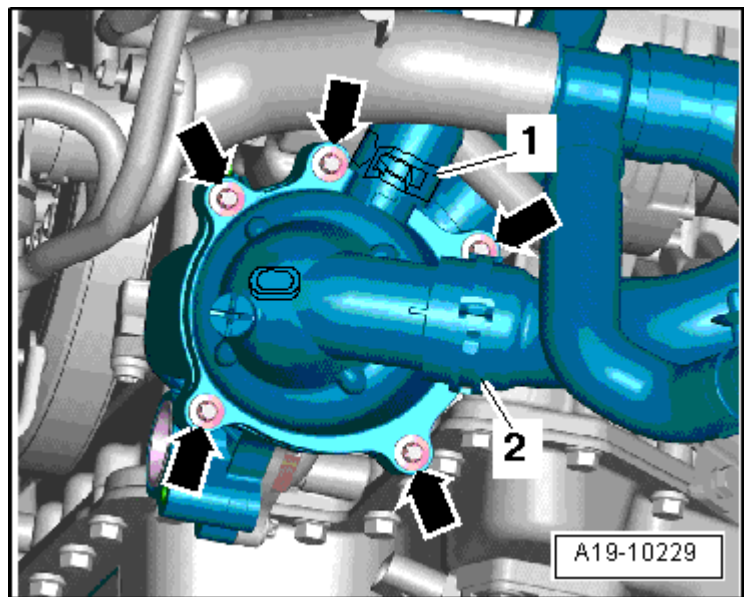

Installing

Installation is in reverse order of removal, note the following:



Note

- ◆ Replace seals and O-rings.
 - ◆ Secure all hose connections with hose clamps appropriate for the model. Refer to the electronic parts catalog ETKA.
- Fill with coolant → [Anchor](#).

Tightening Specifications

Component	Nm
Coolant regulator housing to coolant pump housing	9

