

## 2.38 Removing and installing interior light/ reading light (front)

### Removing

- Open (sun)glasses compartment -1-.
- Remove bolt -3-.
- Swivel down interior light/reading light (front) -2- -arrow- and disengage.
- Unplug electrical connectors.

### Installing

Installation is carried out in the reverse order; note the following:

- Fit interior light and secure.

