



Roof Operation Overview

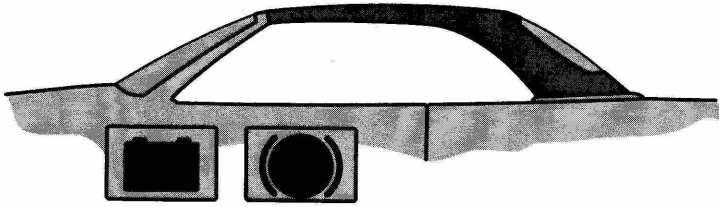


Convertible top closed


1. • Car stationary.
• Ignition switched on.
• Parking brake applied.

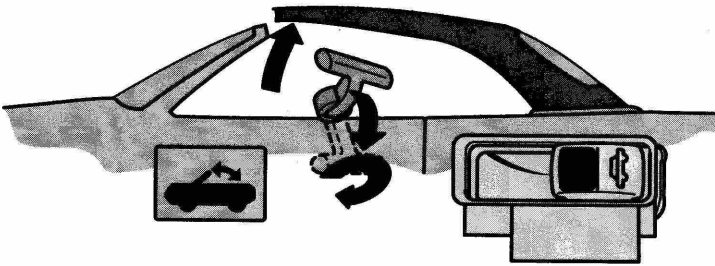


2. • Release the top latch on the roof frame.
• Lift switch in the center console.
• Indicator light illuminates.
• The side windows are automatically lowered 15 cm.

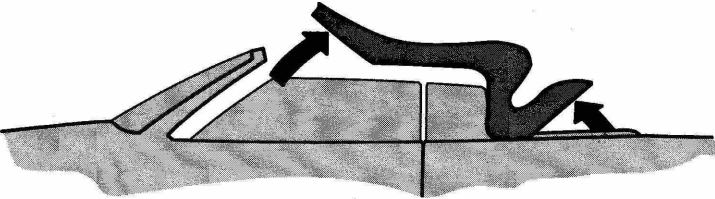

3. • The tensioning bow cylinders pull the front of the convertible top back and up and raise the rear.
• The trunk lid is locked.

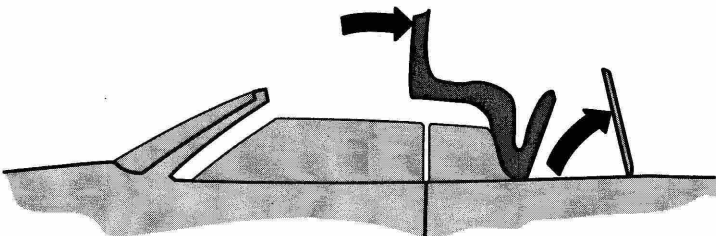

4. • The locks of the convertible top compartment cover are unlocked hydraulically. The compartment cover is opened by a cylinder.
• The convertible top is then stowed in the compartment by the main cylinder.

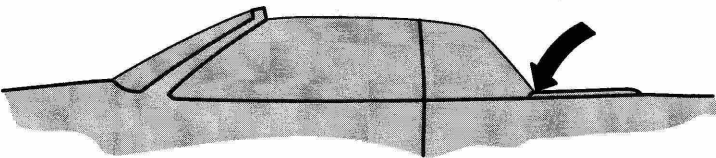

5. • The compartment cover is closed and the hydraulic cylinders in the two locks pull the compartment cover into the end position.
• The trunk lid is unlocked.
• The indicator light goes out and the car can be moved.
• If the Convertible Top Switch is continuously held in the up position even though the convertible top is completely stowed, all windows will be fully raised.