



# Solenoid Valve Block

The solenoid valve block contains 8 solenoid valves which perform the following tasks:

- N88 = Open convertible top compartment cover
- N89 = Close convertible top compartment cover
- N90 = Open convertible top
- N91 = Close convertible top
- N92 = Lower tensioning bow
- N93 = Raise tensioning bow
- N94 = Unlock convertible top compartment cover
- N186 = Lock convertible top compartment cover

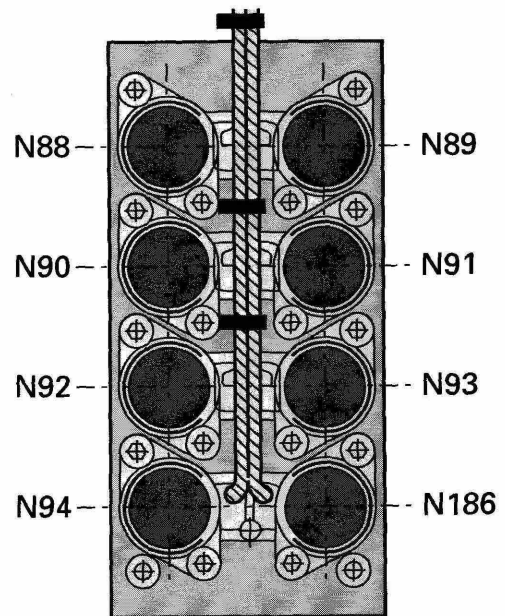

221/44

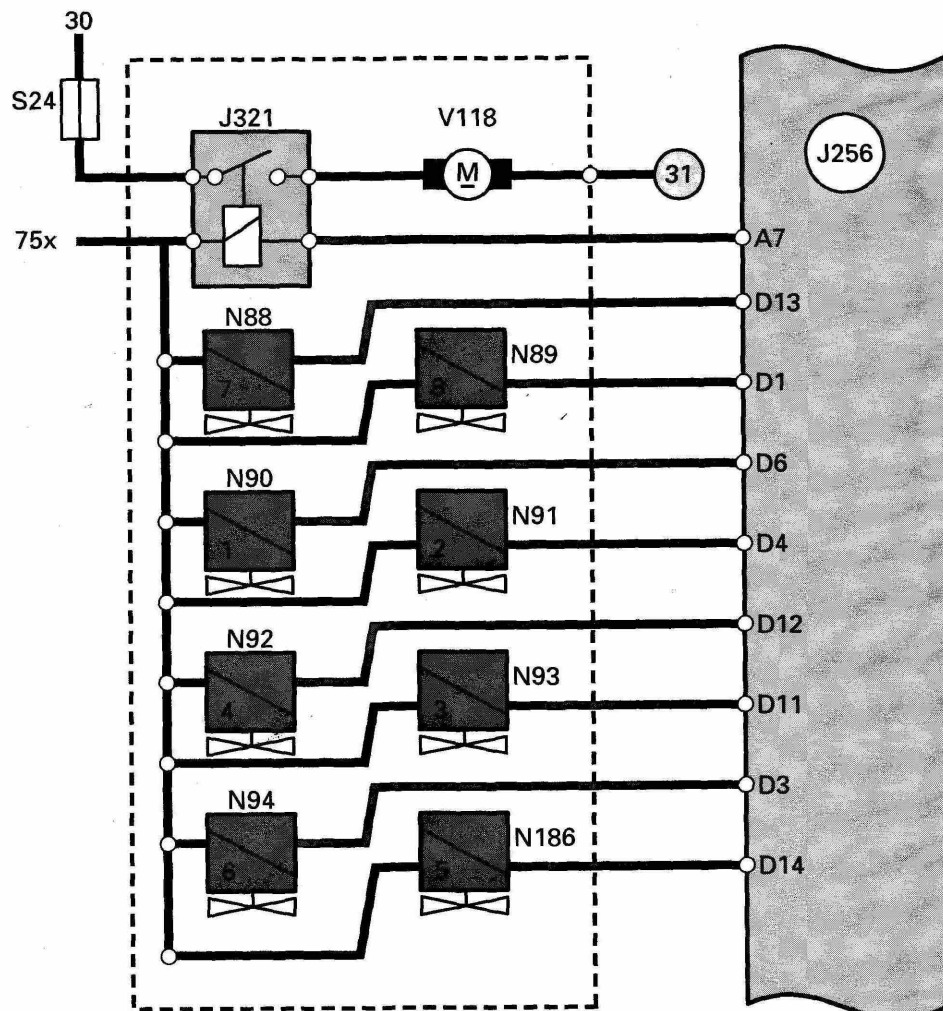

221/45