



When current is applied to the coil of the solenoid valve, the moving steel core pushes the upper ball valve closed. At the same time the lower ball valve is opened by an actuating rod. The hydraulic fluid is now able to flow

through the outlet into the hydraulic cylinder.

When the ignition is off, all the valves in the hydraulic control unit are open and the convertible top can be operated manually.