

- ▶ 2.5 Nm (22 in. lb)

8 - Screw

- ▶ 2.5 Nm (22 in. lb)

9 - Armrest

10 - Switch plate

11 - Door trim panel

Removing:

- Remove door handle by loosening screws
- Disconnect harness connectors to switch plate
- Remove armrest bracket
- Remove inner door lock mechanism
- Remove cover
- Unhook trim from top
- ▶ Number and position of tabs
- ▶ Install in reverse order of removal

12 - Self-tapping screw

- ▶ 2.5 Nm (22 in. lb)

13 - Inside door release mechanism

- ▶ Remove self-tapping screw
- ▶ Push toward front and remove from trim
- ▶ Disconnect cable

14 - Self-tapping screw

- ▶ 2.5 Nm (22 in. lb)

15 - Cover

16 - Guide for inside door release mechanism

17 - Trim piece, rear

18 - Lock knob

- ▶ Not necessary to remove to remove door trim panel