



Fig. 1 Removing and installing window regulator

- Remove door trim panel ⇒ Door trim panel, removing and installing .
- Disconnect release cable for internal door lock.
- Disconnect harness connectors for power window motor.
- Remove nuts for power window motor.
- Remove bolts for safety catch bracket and remove catch.
- Remove mounting bolts for window regulator and remove window regulator from top.
- Unbolt and remove window.

Copyright © 2006 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed: