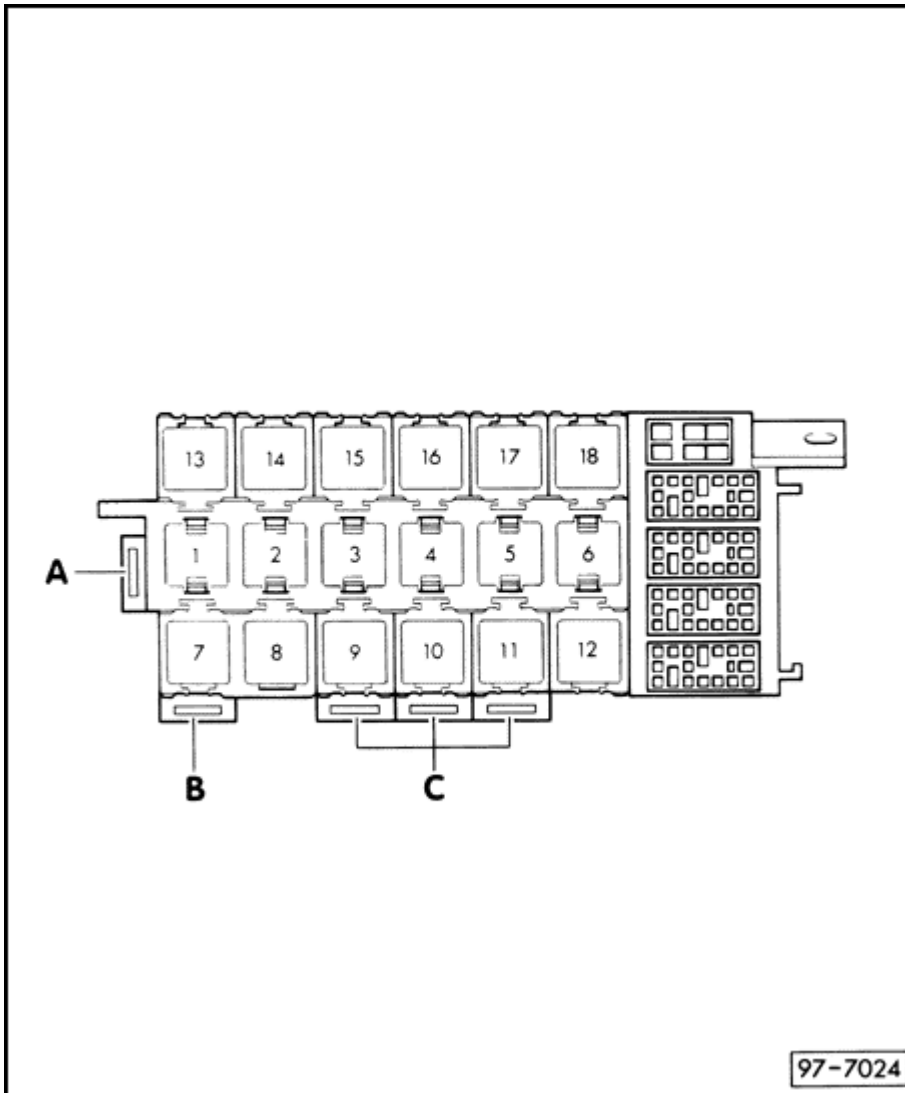


Audi > B3 Platform > 1994 - 1998**Electrical Equipment****97 - Wiring****Auxiliary relay panel with connector station and fuse adapters****CAUTION!**

Before working on the electrical system:

- ◆ Determine the correct coding for the anti-theft radio.
- ◆ Disconnect the battery Ground (GND) strap.

Fuse adapters**A -Fuse adapter, coolant fan**

- ◆ Worldwide application only

B -Fuse adapter, coolant fan (USA)


- ◆ Coolant fan fuse-60A

C -Fuse adapter, thermal fuse

- ◆ Power window circuit breaker -30A
- ◆ Power seats circuit breaker -30A
- ◆ Convertible top hydraulic pump circuit breaker -30A

Note:

Circuit breakers in adapter -C- are installed in any open position, and are not assigned a specific location.

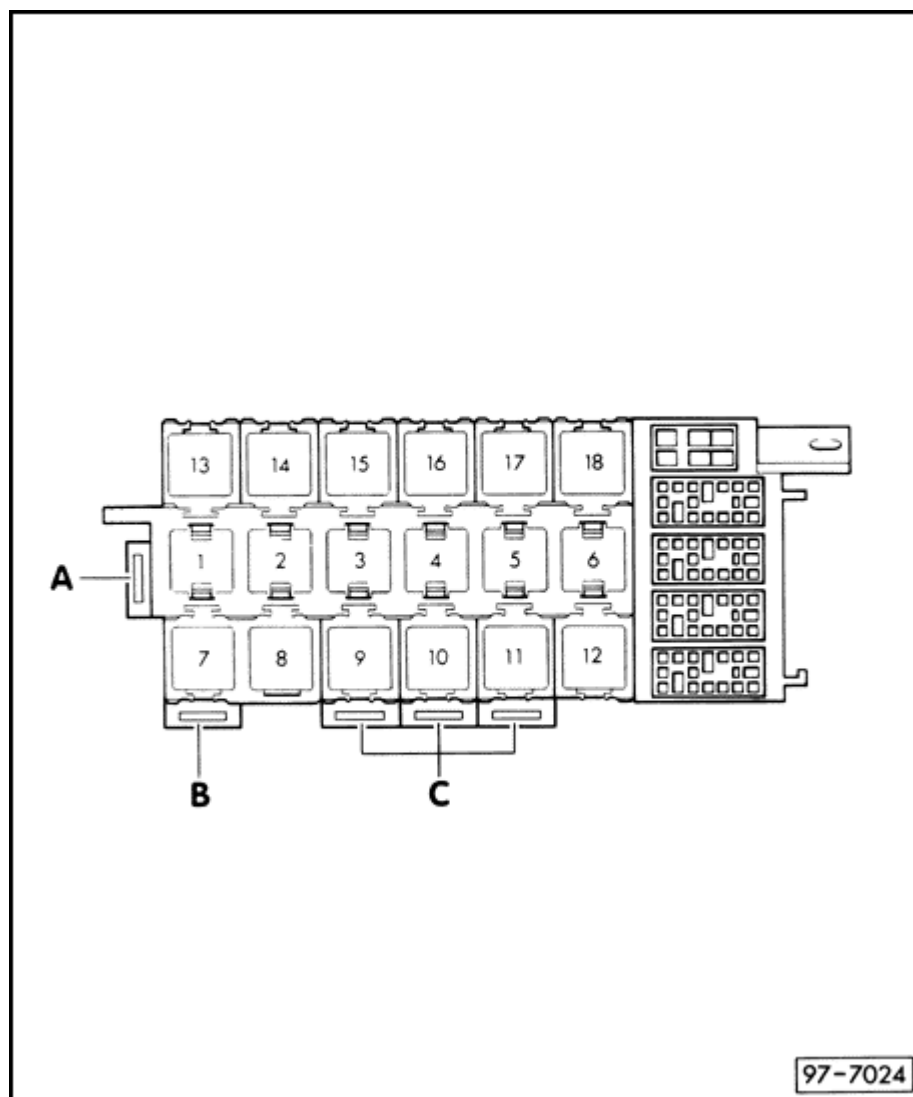

Relays

1 -Park/Neutral Position (PNP) relay -J226-


2 -Shift lock control module -J221-

- ◆ Automatic transmission only

- 3, 4 -A/C clutch control module -J153-1)

- ◆ Manual A/C only

- 5,6 -Power window control module1)

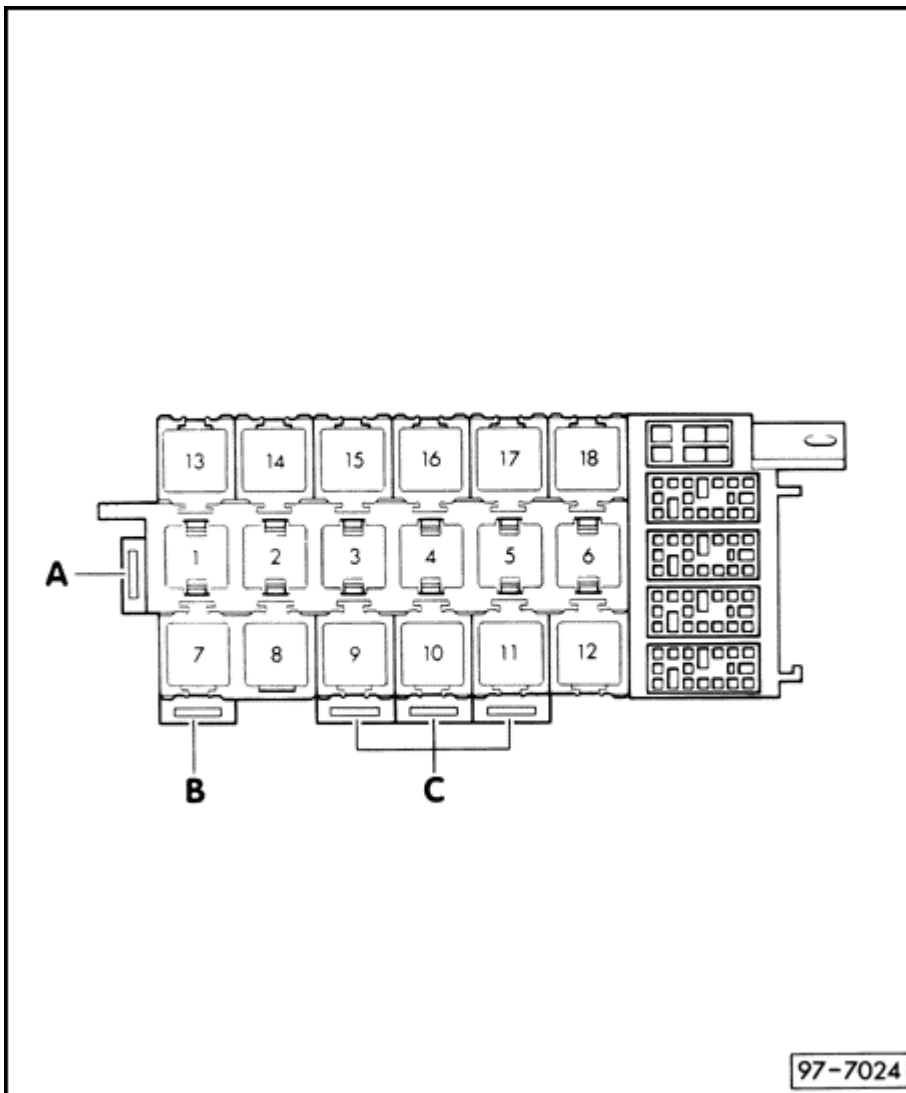

7 -Convertible top hydraulic pump relay -J321-

8 -Open

9 -Airbag Malfunction Indicator Lamp (MIL) relay

10 -Daytime running light relay

- ◆ Canada only

11 -Program switch illumination relay -J300-


- ◆ Automatic transmission only

12 -Warning buzzer/chime

- ◆ With Auto-check system

- ◆ USA only

1) Occupies two positions on relay panel

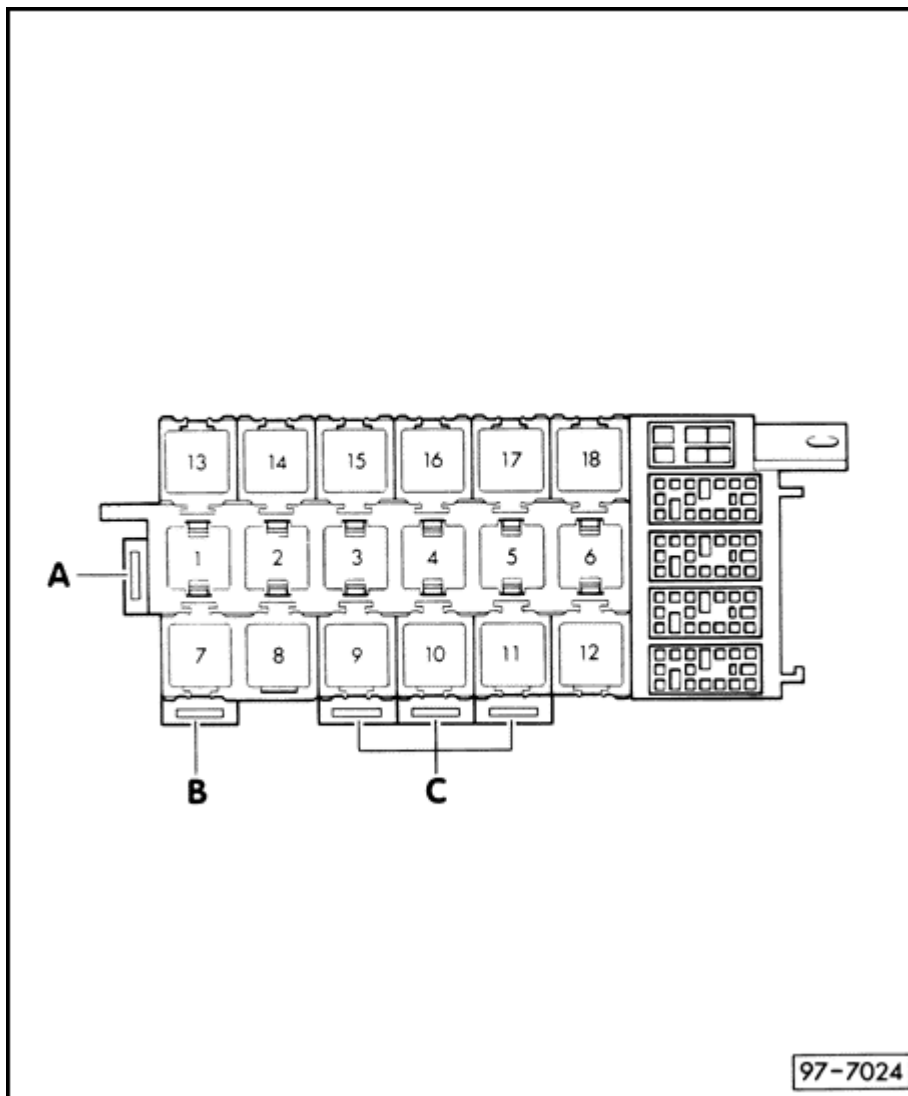

13 -Power window opening relay -J291-

14 -Open

15 -Front lamp control module -J123-

- ◆ With Auto-check system only

16 -Power window closing relay -J292-

17 -Open

18 -Third speed coolant fan control relay

- ◆ High speed