



## Removing and installing dash panel cover (driver side)

### Removing

- Remove side dash panel cover (driver side) → **Chapter**.
- Depending on equipment version: Open storage compartment cover -1- and remove bolts -arrows B-.
- Remove bolts -arrows A-.
- Unfasten dash panel cover (driver side) -2- from dash panel by hand -arrows C-.
- Detach dash panel cover (driver side).

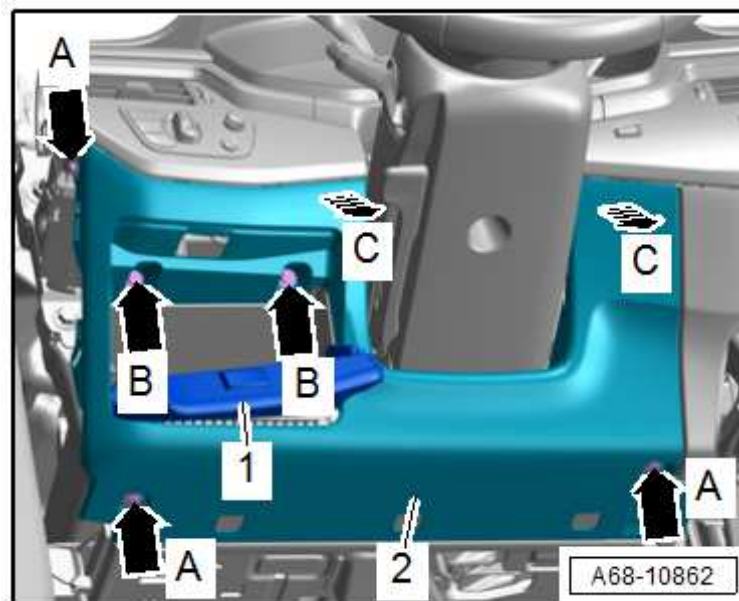

- Remove bolt -arrow A-.
- Using a screwdriver, release catch -1- and pull dash panel cover (bottom, driver side) -2- towards rear out of mounting -arrow B-.
- Disengage diagnostic connection from dash panel cover.
- Depending on equipment version: Unplug electrical connectors for footwell light, parking aid warning buzzer and emergency call loudspeaker.

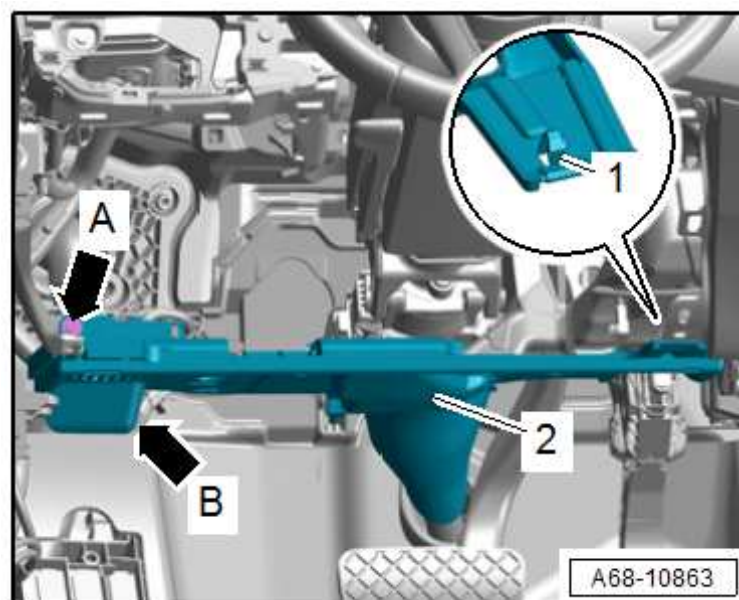

### Installing

Install in reverse order of removal.

**Notes for installation: tightening torques, renewing components etc. → Chapter „Exploded view - dash panel cover (driver side)“**