

Repair Manual All 2014 ➤

Fluid Capacity Tables

Edition 04.2013

Audi





# List of Workshop Manual Repair Groups

Repair Group

03 - Maintenance, Diagnosis



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Technical information should always be available to the foremen and mechanics, because their careful and constant adherence to the instructions is essential to ensure vehicle road-worthiness and safety. In addition, the normal basic safety precautions for working on motor vehicles must, as a matter of course, be observed.

All rights reserved.

No reproduction without prior agreement from publisher.

# **Contents**

3 - Mair	tenance, Diagnosis
1	2014 Fluid Capacity Tables
1.1	Audi A4/S4/allroad
1.2	Audi A5/S5/RS5
1.3	Audi A6/S6
1.4	Audi A7/S7/RS7
1.5	Audi A8/A8L
1.6	Audi Q5/SQ5
1.7	Audi Q7
1.8	Audi R8
1.9	Audi TT TTS
2	Revision History









# Maintenance, Diagnosis

# 2014 Fluid Capacity Tables

(Edition 04.2013)

USA5R505421 - 04.2013

- ⇒ A1.1 4/S4/allroad", page 1
- ⇒ A1.2 5/S5/RS5", page 3
- ⇒ A1.3 6/S6", page 5
- ⇒ A1.4 7/S7/RS7", page 7
- ⇒ A1.5 8/A8L", page 8
- ⇒ Q1.6 5/SQ5", page 10
- ⇒ Q1.7 7", page 12
- ⇒ R1.8 8", page 13
- ⇒ T1.9 T TTS", page 15

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

#### Audi A4/S4/allroad 1.1



### Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Component/S	System	Capacity	Part Number/ Specification
2.0T Engine (CAED)			
	Oil and Filter Change	4.6 L (4.9 qt.)	VW 502 00
	Coolant	10.0 L (10.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
2.0T Engine (CPMB)	·	•	
	Oil and Filter Change	4.6 L (4.9 qt.)	VW 502 00
	Coolant	10.0 L (10.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0T Engine (CTUB)		•	•
	Oil and Filter Change	6.8 L (7.2 qt.)	VW 502 00

Component/System		Capacity	Part Number/ Specification
	Coolant	12.0 L (12.6 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
6 Speed Manual Transmission 0B2			
	Initial Fill	4.8 L (5.1 qt.)	G 055 532 A2
	Rear Final Drive - OBC	0.9 L (1.0 qt.)	G 052 145 S2
Pro	Rear Final Drive	1.0 L (1.1 qt.)	rposes, in part or in whole
6 Speed Manual Transmission 0B4	with respect to the correctness	of information in this docu	nent. Copyright by AUDI
	Initial Fill	3.8 L (4.0 qt.)	G 052 911 A2
	Rear Final Drive	1.0 L (1.1 qt.)	G 052 145 S2
Continuously Variable Transmission 0AW		WWAI	
	Initial Fill	8.0 L (8.5 qt.)	G 052 516 A2
	Refill	5.5 - 7.0 L (5.8 - 7.4 qt.)	
	Front Final Drive	1.1 L (1.2 qt.)	G 055 190 A2
7 Speed S-tronic Transmission 0B5			
	Initial Fill	7.5 L (7.9 qt.)	G 052 529 A2
	Refill	6.7 L (7.0 qt.)	
	Front Final Drive	5.0 L (5.3 qt.)	G 052 513 A2
	Rear Final Drive	0.9 L (1.0 qt.)	G 052 145 S2
8 Speed Tiptronic Transmission 0BK/OBL			
	Initial Fill	8.6 L (9.0 qt.)	G 060 162 A2
	Refill	3.6 L - 4.0 L (3.8 qt 4.2 qt.)	
	Front Final Drive	1.0 L (1.1 qt.)	G 052 145 S2
	Transfer Case	1.0 L (1.1 qt.)	G 055 145 A2
	Rear Final Drive	1.0 L (1.1 qt.)	G 052 145 S2
Brake System			
	-	1.0 L (1.1 qt.)	B 000 750
A/C System			
	Refrigerant	550 ± 15 g (19.5 ± 0.5 oz.)	See ETKA
	PAG Oil, Denso	150 ± 10 cc (5.0 ± 0.3 fl. oz.)	G 052 300 A2
Window/Headlamp Washer System	-	<u>'</u>	
	-	4.5 L (4.8 qt.)	G 052 164

#### 1.2 Audi A5/S5/RS5



# Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards. Protected by copyright

Part numbers are for reference only. Always check with your parts department for the latest information.

Copying for private or commercial purposes, in part or in whole, is not ised by AUDI AG. AUDI AG does not guarantee or accept any liability prrectness of information in this document. Copyright by AUDI AG.

Component/System	-	Capacity	Part Number/ Specification
2.0T Engine (CAED)			
	Oil and Filter Change	4.6 L (4.9 qt.)	VW 502 00
	Coolant	10.0 L (10.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
2.0T Engine (CPMB)			
	Oil and Filter Change	4.6 L (4.9 qt.)	VW 502 00
	Coolant	10.0 L (10.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0T Engine (CTUB)	-	1	
	Oil and Filter Change	6.8 L (7.2 qt.)	VW 502 00
	Coolant	11.1 L (11.7 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
4.2 L Engine (CFSA)	•		
	Oil and Filter Change	9.7 L (10.2 qt.)	VW 502 00
	Coolant	15.0 L (15.8 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
6 Speed Manual Transmission 0B2	•		
	Initial Fill	4.5 L (4.7 qt.)	G 052 911 A2
	Rear Final Drive	0.9 L (1.0 qt.)	G 052 145 S2
6 Speed Manual Transmission 0B4			
	Initial Fill	3.8 L (4.0 qt.)	G 052 911 A2
	Rear Final Drive	0.9 L (1.0 qt.)	G 052 145 S2
Continuously Variable Transmission 0AW			
	Initial Fill	8.0 L (8.5 qt.)	G 052 516 A2
	Refill	5.5 - 6.0 L (5.8 - 6.3 qt.)	

Component/System		Capacity	Part Number/ Specification
	Front Final Drive	1.1 L (1.2 qt.)	G 055 190 A2
7 Speed S-tronic Transmission 0B5			
	Initial Fill	7.5 L (7.9 qt.)	G 052 529 A2
	Refill	6.7 L (7.0 qt.)	
	Transfer Case	4.35 L (4.5 qt.)	G 055 532 A2
	Rear Final Drive (0BC/0BD)	0.9 L (1.0 qt.)	G 052 145 S2
	Rear Final Drive (0BE)	1.4 L (1.4 qt.)	See ETKA (gear oil) See ETKA (ATF)
	Rear Final Drive (0BF)	0.95 L (1.0 qt.)	See ETKA (gear oil) See ETKA (ATF)
8 Speed Tiptronic Transmission 0BK/OBL			
	Initial Fill	8.6 L (9.0 qt.)	G 060 162 A2
	Refill	3.6 L - 4.0 L (3.8 qt 4.2 qt.)	
	Front Final Drive	1.0 L (1.1 qt.)	G 052 145 S2
	Transfer Case	1.0 L (1.1 qt.)	G 055 145 A2
	Rear Final Drive	1.1 L (1.1 qt.)	G 052 145 S2
Brake System			
	-	1.0 L (1.1 qt.)	B 000 750
A/C System			
	Refrigerant	550 ± 15g (19.5 ± 0.5 oz.)	See ETKA
	Refrigerant - RS5	570 ± 20g (20.1 ± 0.7 oz.)	See ETKA
	PAG Oil	150 ± 10 cc (5.0 ± 0.3 fl. oz.)	G 052 300 A2
Window/Headlamp Washer System			
		4.5 L (4.8 qt.)	G 052 164





#### 1.3 Audi A6/S6



# Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Component/System		Capacity	Part Number/ Specification
2.0L Engine (CAED)			
Poste stad by acquirinht Consider for adjusts a	Oil and Filter Change	4.6 L (4.9 qt.)	VW 502 00
Protected by copyright. Copying for private or permitted unless authorised by AUDI AG. AL with respect to the correctness of informat		10.0 (L. (10.5 gt.) right by AUDI AG.	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0 L Engine (CTUA)			
	Oil and Filter Change	6.8 L (7.2 qt.)	VW 502 00
	Coolant	12.0 L (12.7 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0 L TDI Engine (CPNB)			
	Oil and Filter Change	6.4 L (6.8 qt.)	VW 507 00
	Coolant	12.0 L (12.7 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
4.0L Engine (CEUC)			
	Oil and Filter Change	8.3 L (8.8 qt.)	VW 502 00
	Coolant	15.0 L (15.8 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
AdBlue® Tank*			
* Only fill with filling devise VAS6542 & holding devise SET740	Initial Fill	17.0 L (4.5 gal.)	G 052 910 A2 or
			G 052 910 A4
CVT (0AW)			
	Initial Fill	8.0 L (8.5 qt.)	G 052 516 A2
	Refill	5.5 L - 6.0 L (5.8 qt 6.3 qt.)	
	Front Final Drive - Initial Fill	1.1 L (1.2 qt.)	G 055 190 A2
7 Speed S-tronic (0B5)			

Component/System		Capacity	Part Number/ Specification
	Automatic Portion New Fill	7.5 L (7.9 qt.)	G 052 529 A2
	Refill	6.7 L (7.0 qt.)	
	Front Final Drive - Initial Fill	1.0 L (1.0 qt.)	G 052 145 A2
	Transfer Case - New Fill	4.35 L (4.5 qt.)	G 055 532 A2
	Rear Final Drive	0.9 L (1.0 qt.)	G 052 145 S2
8 Speed Tiptronic Transmission (0BK)			
	Initial Fill	8.6 L (9.0 qt.)	G 060 162 A2
	Refill	3.6 L - 4.0 L (3.8 qt 4.2 qt.)	
	Front Final Drive - Initial Fill	1.0 L (1.1 qt.)	G 052 145 S2
	Front Final Drive - Refill	0.9 L (1.0 qt.)	
	Transfer Case - Initial Fill	1.0 L (1.1 qt.)	G 055 145 A2
	Transfer Case - Refill	0.85 L (0.9 qt.)	
	Rear Final Drive	0.9 L (1.0 qt.)	G 052 145 S2
Brake System			
	-//	1.0 L (1.1 qt.)	B 000 750
A/C System			
	Refrigerant - A6	570 ± 20g (20.1 ± 0.7 oz.)	See ETKA
Alla	Refrigerant - S6	530 ± 20g (18.6 ± 0.7 oz.)	See ETKA
Protected by convigint. Conving for private or commercial purp	PAG Oil	120 ± 10 cc (4.0 ± 0.3 fl. oz.)	G 052 300 A2
Window/Headlamp Washer System AG. AUDI AG does not g	uarantee or accept any liab	ility	
with respect to the correctness of information in this docume	w/o headlight wash	3.5 L (3.5 qt.)	G 052 164
ar\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	with headlight wash	4.9 L (5.2 qt.)	

#### 1.4 Audi A7/S7/RS7



# Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Component/System	wright. Conving for private or	Capacity	Part Number/ Specification
3.0 L Engine (CTUA) permitted unless	authorised by AUDI AG. AU	DI AG does not guarantee	or accept any liability
with respect to	Oil and Filter Change	6.8 L (7.2 qt.)	VW 502 00
	Coolant	12.0 L (12.7 qt.)	G 012 A8G
3.0 L TDI Engine (CPNB)		723	
	Oil and Filter Change	6.4 L (6.8 qt.)	VW 507 00
	Coolant	12.0 L (12.7 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
4.0L Engine (CEUC)	-		
	Oil and Filter Change	8.3 L (8.8 qt.)	VW 502 00
	Coolant	15.0 L (12.7 qt.)	G 012 A8G
4.0L Engine (CRDB)	-		
	Oil and Filter Change	8.3 L (8.8 qt.)	VW 502 00
	Coolant	15.0 L (12.7 qt.)	G 012 A8G
AdBlue® Tank*	,		
* Only fill with filling devise VAS6542 & holding devise SET740	Initial Fill	17.0 L (4.5 gal.)	G 052 910 A2 or
			G 052 910 A4
7 Speed S-tronic (0B5)	T		
	Initial Fill	7.5 L (7.9 qt.)	G 052 529 A2
	Refill	6.7 L (7.0 qt.)	
	Transfer Case	4.35 L (4.5 qt.)	G 055 532 A2
	Rear Final Drive	0.9 L (1.0 qt.)	G 052 145 S2
8 Speed Tiptronic Transmission 0BK	<u> </u>		
	Initial Fill	8.6 L (9.0 qt.)	G 060 162 A2
	Refill	3.6 L - 4.0 L (3.8 qt 4.2 qt.)	
	Front Final Drive - Initial Fill	1.0 L (1.1 qt.)	G 052 145 S2
	Front Final Drive - Refill	0.9 L (1.0 qt.)	
	Transfer Case - Initial Fill	1.0 L (1.1 qt.)	G 055 145 A2

Component/System		Capacity	Part Number/ Specification
	Transfer Case - Refill	0.85 L (0.9 qt.)	
	Rear Final Drive - Gear Oil	0.9 L (1.0 qt.)	G 052 145 S2
	Rear Final Drive - ATF	0.9 L (1.0 qt.)	G 055 515 A2
Brake System			
	-	1.0 L (1.1 qt.)	B 000 750
A/C System	•		
	Refrigerant	570 ± 20g (20.1 ± 0.7 oz.)	See ETKA
	PAG Oil	120 ± 10 cc (4.0 ± 0.3 fl. oz.)	G 052 300 A2
Window/Headlamp Washer System	,		
	w/o headlight washer	3.5 L (3.7 qt.)	G 052 164
	w/headlight washer	4.9L (5.2 qt.)	

# 1.5 Audi A8/A8L



# Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Part numbers are for reference only. Always check with your parts department for the latest information.

\* Funnels or aftermarket speed filling devices are not allowed when filling the engine with oil.

Component/System		Capacity	Part Number/ Specification
3.0L TDI Engine (CPNA)			
	Oil and Filter Change	6.4L (6.8 qt.)	VW 507 00
Protect	Coolant cted by copyright. Copying for pr	15.0 L (15.9 qt.)	G13 (TL-VW774J). Dilute with Dis-
perm	itted unless authorised by AUDL th respect to the correctness of ir	AG. AUDI AG does not gua	trantee or accept any liabil
o.oc Engine (O105)	Oil and Filter Change	6.8L (7.19 qt.)	VW 502 00

Component/System		Capacity	Part Number/ Specification
	Coolant	15.0 L (15.9 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
4.0L Engine (CEUA)			
	Oil and Filter Change	8.3L (8.77 qt. )	VW 502 00
	Coolant	15.0 L (15.9 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
4.0 L Engine (CGTA)			
	Oil and Filter Change	8.3L L (8.77 qt.)	VW 502 00
	Coolant	15.0 L (15.9 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
6.3 L Engine (CEJA)			
* Funnels or aftermarket speed filling devices are not allowed when filling the engine with oil.	Oil and Filter Change*	11.2 L (11.8 qt.)*	VW 502 00*
	Coolant	15.0 L (15.9 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
8 Speed Automatic Transmission 0BK			
	Initial Fill	8.6 L (9.1 qt.)	G 060 162 A2
AUG	Refill	3.6 L - 4.0 L (3.8 qt 4.2 qt.)	
Protected by copyright. Copying for private or commerc permitted unless authorised by AUDI AG. AUDI AG downwith respect to the correctness of information in this		1.0 L (1.1 qt.) hole, is not any liability IDI AG.	G 055 145 A2
	Transfer case, common oiling with F/Drive	2.0 L (2.1 qt.)	
E AV2	Hydraulic Con- trol Unit	0.85 L - (0.9 qt.)	G 052 515 A2
	Front Final Drive with sepa- rate oiling	1.1 L (1.2 qt.)	G 052 145 S2
	Front Final Drive with sepa- rate oiling - Re- fill	0.9 L (1.0 qt.)	
	Rear Final Drive	0.9 L (1.0 qt.)	
Power Steering			
	-	1.0 L (1.1 qt.)	G 002 000 / G 004 000
Brake System			
	-	1.0 L (1.1 qt.)	B 000 750
A/C System			
	Refrigerant, sin- gle evaporator	780 ± 20 g (27.5 ± 0.7 oz.)	See ETKA

Component/System		Capacity	Part Number/ Specification
	Refrigerant, du- al evaporator	930 ± 20 g (32.8 oz. ± 0.7 oz.	
	PAG Oil	130 ± 10 cc (4.4 ± 0.3 fl. oz.)	G 052 154 A2
AdBlue® Tank*			
* Only fill with filling devise VAS6542 & holding devise SET740	Initial Fill	24.0 L (6.3 gal.)	ISO Standard 22241-1
Window/Headlamp Washer System			
	-	5.0 L (5.25 qt.)	G 052 164

#### 1.6 Audi Q5/SQ5



## Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Component/System		Capacity	Part Number/ Specification
2.0TFSI Engine (CPMB)			
	Oil and Filter Change	4.6 L (4.9 qt.)	VW 502 00
	Coolant	10.0 L (10.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
2.0L TFSI Engine (CHJA) Hybrid			
	Oil and Filter Change	4.6 L (4.9 qt.)	VW 502 00
	Coolant	10.0 L (10.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0 L Engine (CTUC)			
Post stad by a serial Couri	Oil and Filter Change	6.8 L (7.2 qt.)	VW 502 00
Protected by copyright. Copying permitted unless authorised by with respect to the correctne	AUDI <b>Coolant</b> G does	n12,0rLn(42.7cqti) cument. Copyright by AUD	ly liability G13  I A(TL-VW774J).  Dilute with Distilled Water.

Component/System		Capacity	Part Number/ Specification
3.0 L Engine (CTUD)			
	Oil and Filter Change	6.8 L (7.2 qt.)	VW 502 00
	Coolant	12.0 L (12.7 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0 L Engine (CPNB)			
	Oil and Filter Change	6.4 L (6.8 qt.)	VW 507 00
	Coolant	12.0 L (12.7 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
AdBlue® Tank*	•		
* Only fill with filling devise VAS6542 & holding devise SET740	Initial Fill	23.0 L (6.0 gal.)	G 052 910 A2 or
			G 052 910 A4
8 Speed Tiptronic Transmission 0BW  Protected by copyright. Copying for private or commercial purposes, in pa	at or in whole is not.		
permitted unless authorised by AUDI AG. AUDI AG does not guarantee of with respect to the correctness of information in this document. Copyrights	r accept nitial diffi	8.6 L (9.0 qt.)	G 060 162 A2
with respect to the confectness of information in this document. Copyrig		4.0L (4.2 qt.)	
	Front Final Drive	1.0 L (1.1 qt.)	G 052 145 S2
ervven	Transfer Case	1.0 L (1.1 qt.)	G 055 145 A2
	Rear Final Drive	0.9 L (0.9 qt.)	G 052 145 S2
8 Speed Tiptronic Transmission 0BK/OBL			
	Initial Fill	8.6 L (9.0 qt.)	G 060 162 A2
	Refill	3.6 L - 4.0 L (3.8 qt 4.2 qt.)	
	Front Final Drive	1.0 L (1.1 qt.)	G 052 145 S2
	Transfer Case	1.0 L (1.1 qt.)	G 055 145 A2
	Rear Final Drive	1.0 L (1.1 qt.)	G 052 145 S2
Brake System			
	-	1.0 L (1.1 qt.)	B 000 750
A/C System	1		
	Refrigerant	600 ± 20g (21.1 ± 0.7 oz.)	See ETKA
	Refrigerant - Hybrid	840 ± 20g (29.6 ± 0.7 oz.)	
	PAG Oil - Den- so	150 ± 10 cc (5.1 ± 0.3 fl. oz.)	G 052 300 A2
Window/Headlamp Washer System			
	-	4.6 L (4.9 qt.)	G 052 164

#### 1.7 Audi Q7



# Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Component/System		Capacity	Part Number/ Specification
3.0 L Engine - TDI (CNRB)			
	Oil and Filter Change	7.7 L (8.1 qt.)	VW 507 00
	Coolant	12.0 L (12.6 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0 L Engine (CTWB)  Protected by concernitive dunies	opyright. Copying for privatess authorised by AUDI AG.	e or commercial purposes, AUDI AG does not quaran	in part or in whole, is not tee or accept any liability
with respec	to t@iloand=Filterford Change	nati6:181 [his(7::2:rqt:)) Co	pyri <b>3VW 502</b> 400
	Coolant	15.0 L (15.8 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
3.0 L Engine (CTWA)			
	Oil and Filter Change	6.8 L (7.2 qt.)	VW 502 00
	Coolant	15.0 L (15.8 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
AdBlue® Tank			
	-	23.0 L (6.0 gal)	G 052 910 A2 or G 052 910 A4
8 Speed Automatic Transmission ( 0C8) - Gasoline	1		
	Initial Fill	10.6 L (11.2 qt.)	G 055 540 A2
	Front Final Drive	0.6 - 0.8 L (0.6 - 0.8 qt.)	G 052 145 S2
	Transfer Case	0.65 L (0.7 qt.)	G 052 536 A2
	Rear Final Drive	0.9 - 1.1 L (0.9 - 1.1 qt.)	G 052 145 S2
8 Speed Automatic Transmission ( 0C8) - TDI			
	Initial Fill - TDI Engine	12.8 L (13.5 qt.)	G 055 540 A2
	Refill - TDI En- gine	6.0 L (6.3 qt.)	
	Initial Fill - Gas- oline Engine	10.6 L (11.2 qt.)	G 055 540 A2

Component/System		Capacity	Part Number/ Specification
	Front Final Drive	0.6 - 0.8 L (0.6 - 0.8 qt.)	G 052 145 S2
	Transfer Case	0.65 L (0.7 qt.)	G 052 536 A2
	Rear Final Drive	0.9 - 1.1 L (0.9 - 1.1 qt.)	G 052 145 S2
Brake System	•		
	-	1.0 L (1.1 qt.)	B 000 750
A/C System			
	Refrigerant, One Evaporator	$700 \pm 50 \text{ g}$ (24.7 ± 1.8 oz.)	See ETKA
	Refrigerant, Two Evapora- tors	1050 ± 50 g (37.0 ± 1.8 oz.)	
	Refrigerant - TDI	1050 ± 20 g (37.0 ± 0.7 oz.)	
	PAG Oil, 1 Evaporator	145 ± 15 cc (4.9 ± 0.5 fl. oz.)	G 052 300 A2
	PAG Oil, 2 Evaporators	245 ± 15 cc (8.3 ± 0.5 fl. oz.)	
Window/Headlamp Washer System			
	-	4.5 L (4.8 qt.)	G 052 164

#### 1.8 Audi R8



### Caution Copying for private or commercial purposes, in part or in whole, is no

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability and and the strategy are reapproximate. Always refer to the ARepair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Component/System		Capacity	Part Number/ Specification
4.2 L Engine			
* Refer to the owner manual for proper oil fill and level checking instruction.	Oil and Filter Change	10.0 L (10.6 qt.)	VW 502 00
	Coolant	25.0 L (6.6 gal.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
5.2 L Engine (CTYA)		•	

Component/System		Capacity	Part Number/ Specification
* Refer to the owner manual for proper oil fill and level checking instruction.	Oil and Filter Change	8.3 L (8.8 qt.)	VW 501 01 or VW 505 00 SAE 10-W-60 G 052 194 1L DSP
	Coolant	25.0 L (25.3 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
5.2 L Engine - Plus (CTPA)			
* Refer to the owner manual for proper oil fill and level checking instruction.	Oil and Filter Change	8.3 L (8.8 qt.)	VW 501 01 or 505 00 SAE 10-W-60 G 052 194 1L DSP
	Coolant	25.0 L (25.3 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
6 Speed R-tronic Transmission			
	Initial Fill	4.0 L (4.2 qt.)	G 052 171 A2
	Refill - Trans- mission Cooler Empty	4.0 L (4.2 qt.)	
	Refill - Trans- mission Cooler NOT Empty	3.5 L (3.7 qt.)	
	Hydraulic Unit Man/Auto Only	0.9L (1.0 qt.)	G 004 000
	Front Final Drive Initial Fill	1.4 L (1.5 qt.)	G 052 145 A1
	Front Final Drive Refill	1.3 L (1.4 qt.)	
7 Speed Tiptronic Transmission			
	Initial Fill	10.5L (11.0 qt.)	G 052 529 A2
	Refill	8.0L (8.45 qt.)	
Hydraulic Unit			
	Initial Fill	0.9 L (1.0 qt.)	G 004 000
	Refill	0.9 L (1.0 qt.)	
Brake System			
	- \	1.0 L (1.1 qt.)	B 000 750
A/C System			
	Refrigerant	680 ± 20g (24.0 ± 0.7 oz.)	See ETKA
	PAG Oil	200 ± 10 cc (7.0 ± 0.3 fl. oz.)	G 052 300 A2
Window/Headlamp Washer System			
Protected by copyright. Copying for pormitted unless authorised by ALID	private or commercial purpos	s, i4p0rtor(4v2oqti) no	G 052 164

with respect to the correctness of information in this document. Copyright by AUDI AG.



#### 1.9 **Audi TT TTS**



## Caution

All quantities are approximate. Always refer to the Repair Manual and/or the Maintenance Procedures for correct filling instructions.

Refer to Technical Bulletin 2010043 for engine oils meeting the required Audi oil quality standards.

Component/System		Capacity	Part Number/ Specification
2.0T (CETA)			
	Oil and Filter Change	4.5 L (4.8 qt.)	VW 502 00
	Coolant	9.0 L (9.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
2.0T H.O. (CDMA) by copyright. Copying for private or commercial pu	rposes, in part or in whole, is r	not	
permitted unless authorised by AUDI AG. AUDI AG does not with respect to the correctness of information in this docur	: gyara <b>r</b> nif oracce <del>p</del> tary liab	<sup>lity</sup> 4.5 L (4.8 qt.)	VW 502 00
	Coolant	10.0 L (10.5 qt.)	G13 (TL-VW774J). Dilute with Dis- tilled Water.
6 Speed S-tronic Transmission 02E			
	Initial Fill	6.9 L (7.3 qt.)	G 052 182 A2
	Refill	5.5 L (5.8 qt.)	
	Bevel Box	0.9 L (1.0 qt.)	G 052 145 S2
	Haldex Clutch Initial Fill	0.85 L (0.9 qt.)	G 055 175 A2
	Haldex Clutch Refill	0.7 L (0.8 qt.)	
	Rear Final Drive	0.95 L (1.0 qt.)	G 052 145 S2
Brake System			
	-	1.0 L (1.1 qt.)	B 000 750
A/C System			
	Refrigerant	500 ± 25g (17.6 ± 0.9 oz.)	See ETKA
	PAG Oil-San- den	110 ± 10 cc (3.7 ± 0.3 fl. oz.)	G 052 154 A2
	PAG Oil-Denso	90 ± 10 cc (3.0 ± 0.3 fl. oz.)	G 052 300 A2
Window/Headlamp Washer System			
	-	4.0 L (4.3 qt.)	G 052 164





### 2 **Revision History**

DRUCK NUMBER: USA5R505421

Document Revision Date	Notes
03/01/202 1	Added ext-id - usa.01
12/20/201 9	CEJA changes to 11.2 L (11.8 qt.)* per feedback ABC225 (UPG Feedback); refer to Travis' email from 12/20
11/09/201 7	0BE and 0BF rear final drive added for RS5 models
05/29/201 7	TT metadata corrected to 8J from 8J9; changed all model codes to 2-digit; no vehicle data changed
12/15/16	Update to A6 & A7 AdBlue spec from qt. to gal.
3/29/2016 Protected by 0	Update to RS7 rear sport drive ATF specification.
12/17/20116 5 with respec	Revision history added G does not guarantee or accept any liability to the correctness of information in this document. Copyright by AUDI AG.

# **Cautions & Warnings**

Please read these WARNINGS and CAUTIONS before proceeding with maintenance and repair work. You must answer that you have read and you understand these WARNINGS and CAUTIONS before you will be allowed to view this information.

- If you lack the skills, tools and equipment, or a suitable workshop for any procedure described
  in this manual, we suggest you leave such repairs to an authorized Audi retailer or other
  qualified shop. We especially urge you to consult an authorized Audi retailer before beginning
  repairs on any vehicle that may still be covered wholly or in part by any of the extensive
  warranties issued by Audi.
- Disconnect the battery negative terminal (ground strap) whenever you work on the fuel system
  or the electrical system. Do not smoke or work near heaters or other fire hazards. Keep an
  approved fire extinguisher handy.
- Audi is constantly improving its vehicles and sometimes these changes, both in parts and specifications, are made applicable to earlier models. Therefore, part numbers listed in this manual are for reference only. Always check with your authorized Audi retailer parts department for the latest information.
- Any time the battery has been disconnected on an automatic transmission vehicle, it will be necessary to reestablish Transmission Control Module (TCM) basic settings using the Audi Factory Approved Scan Tool (ST).
- Never work under a lifted vehicle unless it is solidly supported on stands designed for the
  purpose. Do not support a vehicle on cinder blocks, hollow tiles or other props that may
  crumble under continuous load. Never work under a vehicle that is supported solely by a jack.
  Never work under the vehicle while the engine is running.
- For vehicles equipped with an anti-theft radio, be sure of the correct radio activation code
  before disconnecting the battery or removing the radio. If the wrong code is entered when the
  power is restored, the radio may lock up and become inoperable, even if the correct code is
  used in a later attempt.
- If you are going to work under a vehicle on the ground, make sure that the ground is level. Block the wheels to keep the vehicle from rolling. Disconnect the battery negative terminal (ground strap) to prevent others from starting the vehicle while you are under it.
- Do not attempt to work on your vehicle if you do not feel well. You increase the danger of
  injury to yourself and others if you are tired, upset or have taken medicine or any other
  substances that may impair you or keep you from being fully alert.
- Never run the engine unless the work area is well ventilated. Carbon monoxide (CO) kills.
- Always observe good workshop practices. Wear goggles when you operate machine tools or work with acid. Wear goggles, gloves and other protective clothing whenever the job requires working with harmful substances.
- Tie long hair behind your head. Do not wear a necktie, a scarf, loose clothing, or a necklace when you work near machine tools of running engines. If your hair, clothing, or jewelry were to get caught in the machinery, severe injury could result information in this document. Copyright by AUDI AG.

# **Cautions & Warnings**

- Do not re-use any fasteners that are worn or deformed in normal use. Some fasteners are
  designed to be used only once and are unreliable and may fail if used a second time. This
  includes, but is not limited to, nuts, bolts, washers, circlips and cotter pins. Always follow the
  recommendations in this manual replace these fasteners with new parts where indicated,
  and any other time it is deemed necessary by inspection.
- Illuminate the work area adequately but safely. Use a portable safety light for working inside or under the vehicle. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.
- Friction materials such as brake pads and clutch discs may contain asbestos fibers. Do not
  create dust by grinding, sanding, or by cleaning with compressed air. Avoid breathing
  asbestos fibers and asbestos dust. Breathing asbestos can cause serious diseases such as
  asbestosis or cancer, and may result in death.
- Finger rings should be removed so that they cannot cause electrical shorts, get caught in running machinery, or be crushed by heavy parts.
- Before starting a job, make certain that you have all the necessary tools and parts on hand.
  Read all the instructions thoroughly, do not attempt shortcuts. Use tools that are appropriate to
  the work and use only replacement parts meeting Audi specifications. Makeshift tools, parts
  and procedures will not make good repaired by copyright. Copying for private or commercial purposes, in part or in whole, is not
  permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
  with respect to the correctness of information in this document. Copyright by AUDI AG.
- Catch draining fuel, oil or brake fluid in suitable containers. Do not use empty food or beverage containers that might mislead someone into drinking from them. Store flammable fluids away from fire hazards. Wipe up spills at once, but do not store the oily rags, which can ignite and burn spontaneously.
- Use pneumatic and electric tools only to loosen threaded parts and fasteners. Never use these
  tools to tighten fasteners, especially on light alloy parts. Always use a torque wrench to tighten
  fasteners to the tightening torque listed.
- Keep sparks, lighted matches, and open flame away from the top of the battery. If escaping
  hydrogen gas is ignited, it will ignite gas trapped in the cells and cause the battery to explode.
- Be mindful of the environment and ecology. Before you drain the crankcase, find out the proper way to dispose of the oil. Do not pour oil onto the ground, down a drain, or into a stream, pond, or lake. Consult local ordinances that govern the disposal of wastes.
- The air-conditioning (A/C) system is filled with a chemical refrigerant that is hazardous. The A/C system should be serviced only by trained automotive service technicians using approved refrigerant recovery/recycling equipment, trained in related safety precautions, and familiar with regulations governing the discharging and disposal of automotive chemical refrigerants.
- Before doing any electrical welding on vehicles equipped with anti-lock brakes (ABS), disconnect the battery negative terminal (ground strap) and the ABS control module connector.
- Do not expose any part of the A/C system to high temperatures such as open flame.
   Excessive heat will increase system pressure and may cause the system to burst.

# **Cautions & Warnings**

- When boost-charging the battery, first remove the fuses for the Engine Control Module (ECM), the Transmission Control Module (TCM), the ABS control module, and the trip computer. In cases where one or more of these components is not separately fused, disconnect the control module connector(s).
- Some of the vehicles covered by this manual are equipped with a supplemental restraint system (SRS), that automatically deploys an airbag in the event of a frontal impact. The airbag is operated by an explosive device. Handled improperly or without adequate safeguards, it can be accidentally activated and cause serious personal injury. To guard against personal injury or airbag system failure, only trained Audi Service technicians should test, disassemble or service the airbag system.
- Do not quick-charge the battery (for boost starting) for longer than one minute, and do not
  exceed 16.5 volts at the battery with the boosting cables attached. Wait at least one minute
  before boosting the battery a second time.
- Never use a test light to conduct electrical tests of the airbag system. The system must only
  be tested by trained Audi Service technicians using the Audi Factory Approved Scan Tool (ST)
  or an approved equivalent. The airbag unit must never be electrically tested while it is not
  installed in the vehicle.
- Some aerosol tire inflators are highly flammable. Be extremely cautious when repairing a tire
  that may have been inflated using an aerosol tire inflator. Keep sparks, open flame or other
  sources of ignition away from the tire repair area. Inflate and deflate the tire at least four times
  before breaking the bead from the rim. Completely remove the tire from the rim before
  attempting any repair.
- When driving or riding in an airbag-equipped vehicle, never hold test equipment in your hands or lap while the vehicle is in motion. Objects between you and the airbag can increase the risk of injury in an accident.

## I have read and I understand these Cautions and Warnings.



