

Removing and installing interior mirror

When removing and installing the mirror, observe the safety regulations → [Chapter](#) and the general notes → [Chapter](#).




Note

The following procedure for installing and removing refers to the automatic anti-dazzle interior mirror -Y7-. Removal and installation are similar for the other versions.


Removing

Equipment version with lane departure warning:

- Unclip cover (bottom) -1--arrows-.
- Disengage cover (bottom) using a screwdriver and detach.

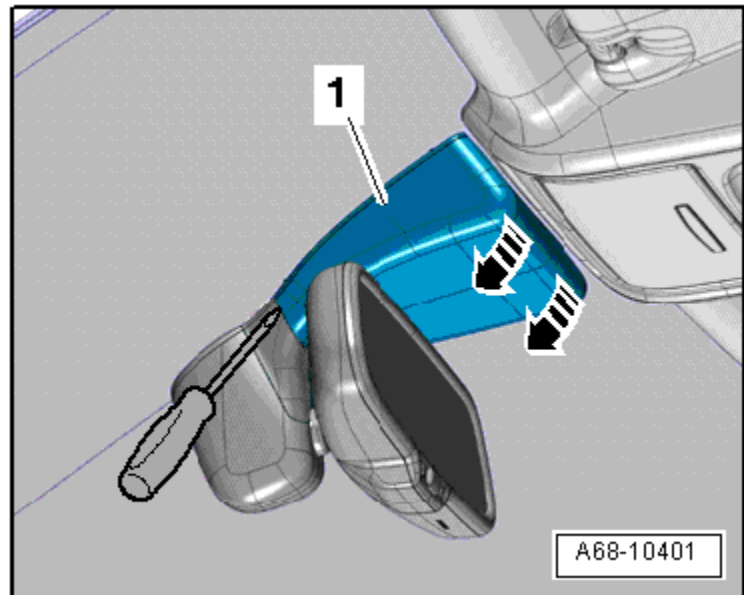


- Unclip cover -1- at mirror base and detach.

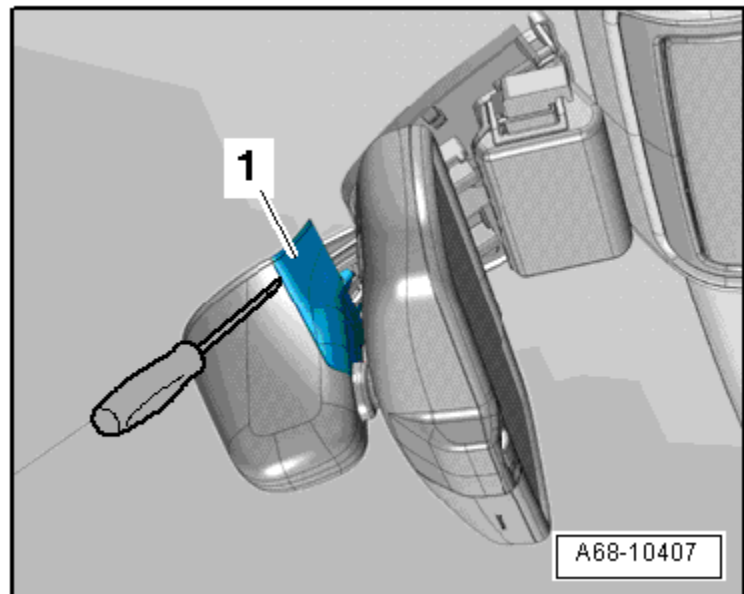

Equipment version without lane departure warning:

- Prise off cover -1- at bottom of mirror base - arrows-.

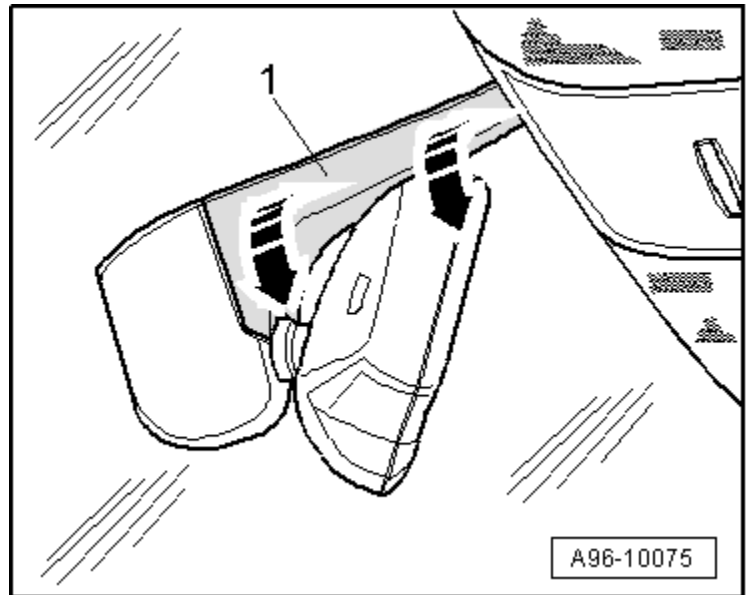

All mirror versions (continued):

- Take electrical connector out of its retainer.
- Unplug electrical connector -2-.
- Turn interior mirror at mirror base -1- as far as it will go in anti-clockwise direction -arrow-.
- Detach interior mirror from retainer.

Installing

Installation is carried out in the reverse order; note the following:

- Position interior mirror at 30° angle to final position.
- Then turn interior mirror clockwise as far as it will go.

