

Exploded view of interior mirror

1 - Interior mirror

- Removing and installing
→ Chapter

2 - Retaining spring

3 - Rain and light sensor -G397-

- Removing and installing
→ Rep. gr.64

4 - Cover (top)

5 - Retainer

- Bonded to windscreen

6 - Cover (top)

7 - Electrical wiring

8 - Cover (bottom)

