

Removing and installing centre armrest

Removing

- Remove trim for centre armrest (rear)
→ Chapter.
- Remove bolts -2 and 3-
- Disengage centre armrest (rear) -1- from rear seat backrest -arrow- and detach.

Installing

Install in reverse order of removal.

Tightening torques → Chapter „Exploded view - centre armrest“

