

Removing and installing cup holder

Removing

- Remove trim for cup holder → Chapter.
- Open flap -1- of cup holder.
- Use a screwdriver to press clip -3- in direction of -arrow- on one side and carefully pull cup holder at trim off centre armrest (rear) by way of retaining tab -2-.
- Repeat procedure on opposite side.
- Take out cup holder.

Installing

Install in reverse order of removal.

