



If the symbol illuminates, add windshield washer fluid to the washer system and also to the headlight washer system ⇒ *page 246*.

Fuel supply too low

When the  symbol illuminates, this means there are about 2.6 gallons (10 liters) of fuel left in the fuel tank. Time to refuel!
⇒ *page 225*.

If the symbol lights up, even when there is ample fuel in the tank, and the text **Fuel tank system malfunction! Contact dealer** appears in the display, there is a fault in the system. Contact an authorized Audi dealer to have the fault rectified.

Battery voltage

If battery power drops into the range where it can limit the ability of the engine to start, this the symbol  appears in the instrument cluster display with the following driver message **Low battery: Battery will be charged while driving**.

While this driver notification is displayed, you have to be prepared for limited starting capability.


Driver message appears and goes out again


If this driver message appears after the ignition is turned on or while driving and it goes out again after a while, the battery has been adequately recharged.

Driver message appears and does not go out again

If this driver notification appears after the ignition is turned on or while driving and does not go out again, the battery's state of charge is not in the optimal range. Starting capability is restricted. Have the battery checked at an authorized Audi dealer or other qualified workshop as soon as possible.

Check engine oil

 **Add oil, max x qt (l). You may cont. driv.**

When the  symbol and driver message appear, add the amount of oil appearing in the display at the next opportunity ⇒ *page 236*.

Engine oil sensor defective


 **Oil level! Sensor defective**

If the symbol illuminates, contact your authorized Audi dealer and have the oil sensor inspected. Until you have this done, check the oil level each time you refuel just to be on the safe side ⇒ *page 236*.

Engine speed limitation

Applies to vehicles: with engine speed limitation

 **Do not exceed max. engine speed of XXXX rpm**


The  symbol illuminates when there is an engine control malfunction. The indicator light **EPC** in the instrument cluster also illuminates. The engine speed is limited to the speed displayed in the driver information system. Keep in mind that the engine speed will not exceed the value displayed in the driver information system, for example when downshifting.

Please go to an authorized Audi dealer or other qualified workshop to have the malfunction repaired.

Diesel particulate filter clogged

Applies to vehicles: with diesel engine and diesel particulate filter

 **Particulate filter See owner's manual**

When the  symbol illuminates, you can alter your driving style to assist the filter self-cleaning process. Drive for approximately 15 minutes with the selector lever in the S position at a minimum speed of 37 mph (60 km/h) and an engine speed of approximately 2,000 RPM. The temperature increase that will result from this can burn off the soot in