

Exploded view - lock cylinder

1 - Cap

2 - Magnet

- Only for vehicles with Keyless Entry system

3 - Lock cylinder

- Unclip cover on end face of door.
- Unscrew bolt as far as possible out of retaining clip with a screwdriver.
- Press back retainer with screwdriver and pull lock cylinder with cap out towards side.

4 - Retaining clip

- No replacement part; only supplied with mounting bracket

5 - Cover

