

## Removing and installing lock cylinder guide

### Removing

- Remove lock cylinder → **Chapter**.
- Remove door trim → **General body repairs, interior; Rep. gr.70; Door trim (front); Removing and installing door trim (front)**.
- Remove door cover → **Chapter**.
- Unscrew bolt -1-.
- Press fastener -4- together and detach cover -3- from door lock -2- towards rear.

### Installing

- When installing, fastener -4- must engage audibly in door lock.
- Tighten bolt -1- to torque → **Item**.

