


Removing and installing poly V-belt

Removing

- Pull off engine cover panel (front) -arrows-.




Note

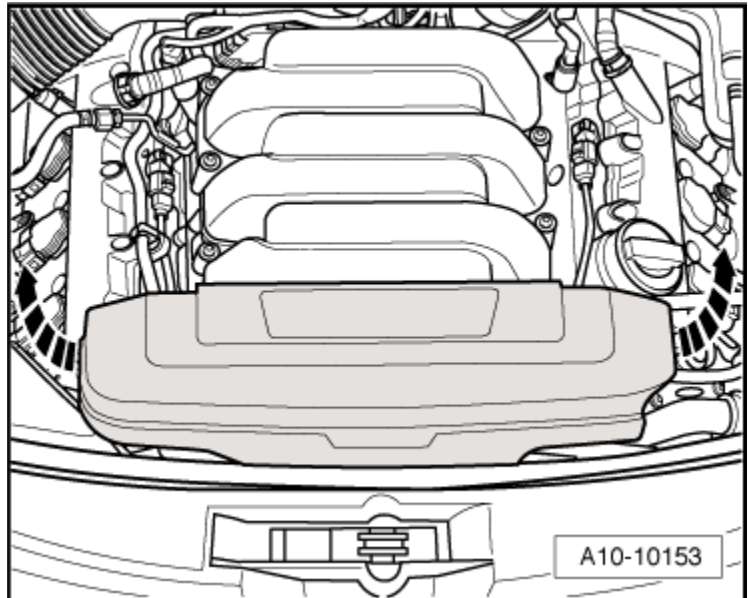

Before removing, mark direction of rotation of poly V-belt with chalk or felt-tipped pen. If the belt runs in the opposite direction when it is refitted, this can cause breakage.

- To slacken poly V-belt turn tensioner in direction of -arrow-.
- Remove poly V-belt and release pressure from the tensioner.

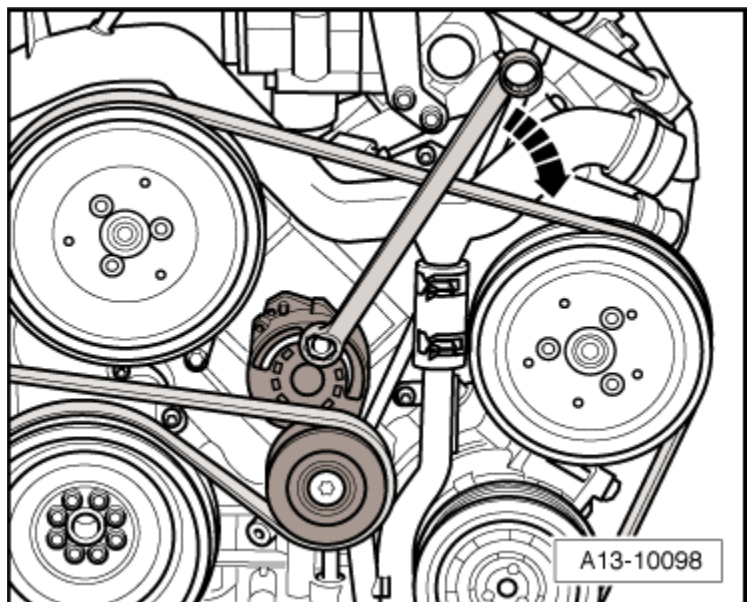

Installing

Installation is carried out in the reverse order; note the following:

- Fit poly V-belt onto pulleys as shown in illustration.
1. Alternator
 2. Idler roller
 3. Coolant pump
 4. Power steering pump
 5. Air conditioner compressor

6. Tensioner for poly V-belt

7. Vibration damper



Note

When installing poly V-belt, make sure it is properly seated on pulleys.

- Start engine and check that belt runs properly.

