

Account

Vehicle

Help

Search

Contact

AutoZone Community

Exit

Your Vehicle: 2010 Audi Q7 Quattro (4LB) V6-3.0L DSL Turbo (CATA)



SAVE \$25
instantly on 4 tires!

tirebuyer.com

SAVE NOW >

SAVE \$25
instantly on 4 tires!

tirebuyer.com

SAVE NOW >

[Vehicle](#) » [Transmission and Drivetrain](#) » [Differential Assembly](#) » [Fluid - Differential](#) » [Service and Repair](#) » [General Information](#) » [Axle Oil Level In Front Final Drive, Checking](#)

Axle Oil Level In Front Final Drive, Checking


Axle Oil Level in Front Final Drive, Checking

Special tools, testers and auxiliary items required

- ⌘ Torque Wrench (V.A.G 1331)
- ⌘ Used oil collection and extraction device (V.A.G 1782)


Procedure

- ⌘ Refer to general repair instructions. Refer to => [General Repair Information] [See: Service and Repair\Procedures.](#)
- ⌘ When checking oil level, vehicle must be on a level surface.
- Remove screws and remove front noise insulation - 1 -.

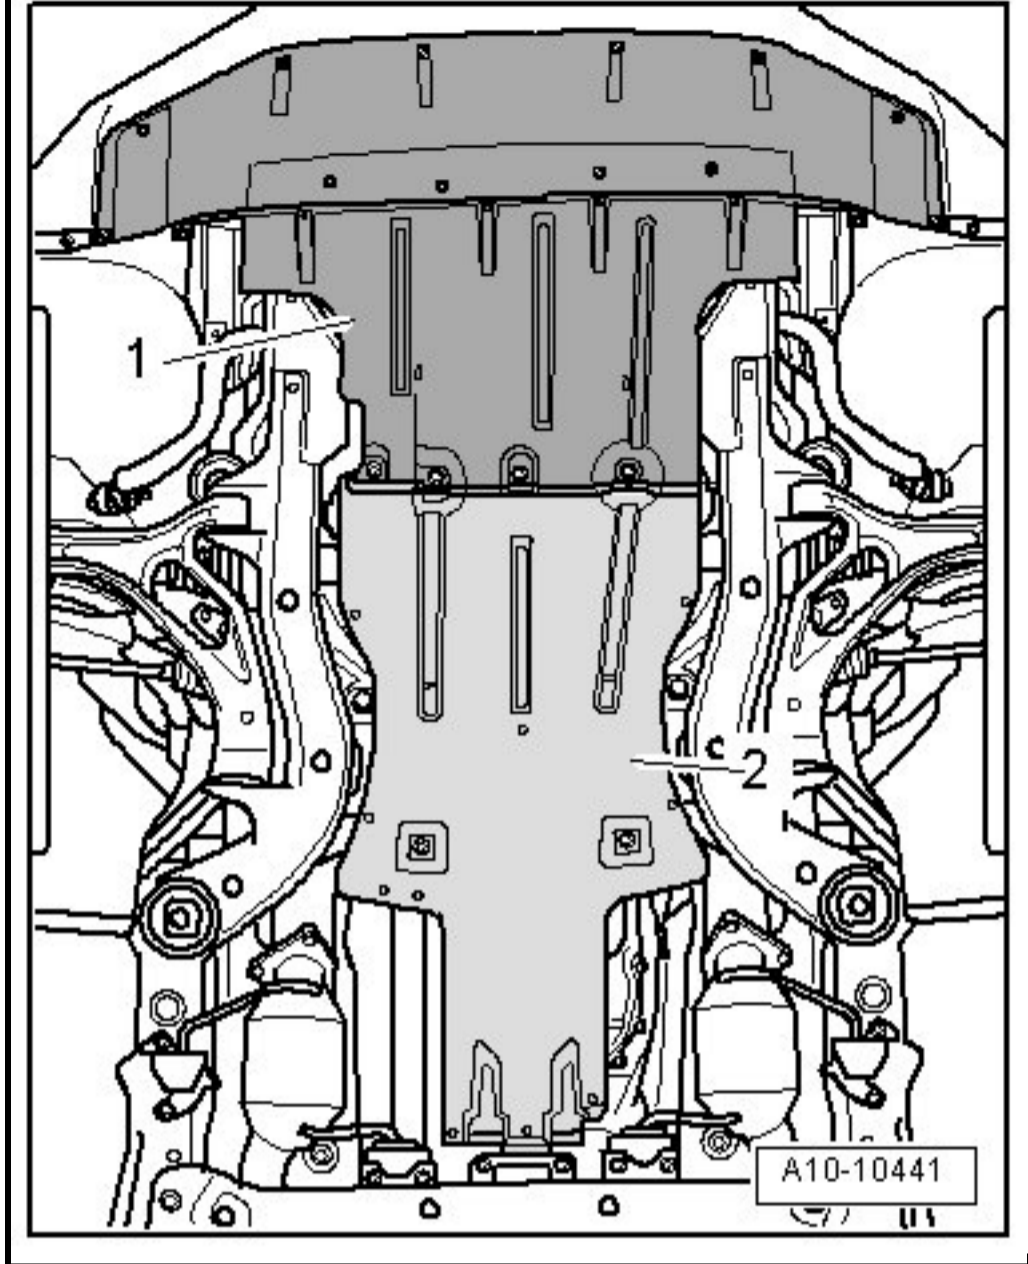

[Zoom](#) [Sized for Print](#)

- Position Used Oil Collecting and Extracting Device (V.A.G 1782) below front final drive.
- Remove oil filler bolt - **arrow** - with a hex key.

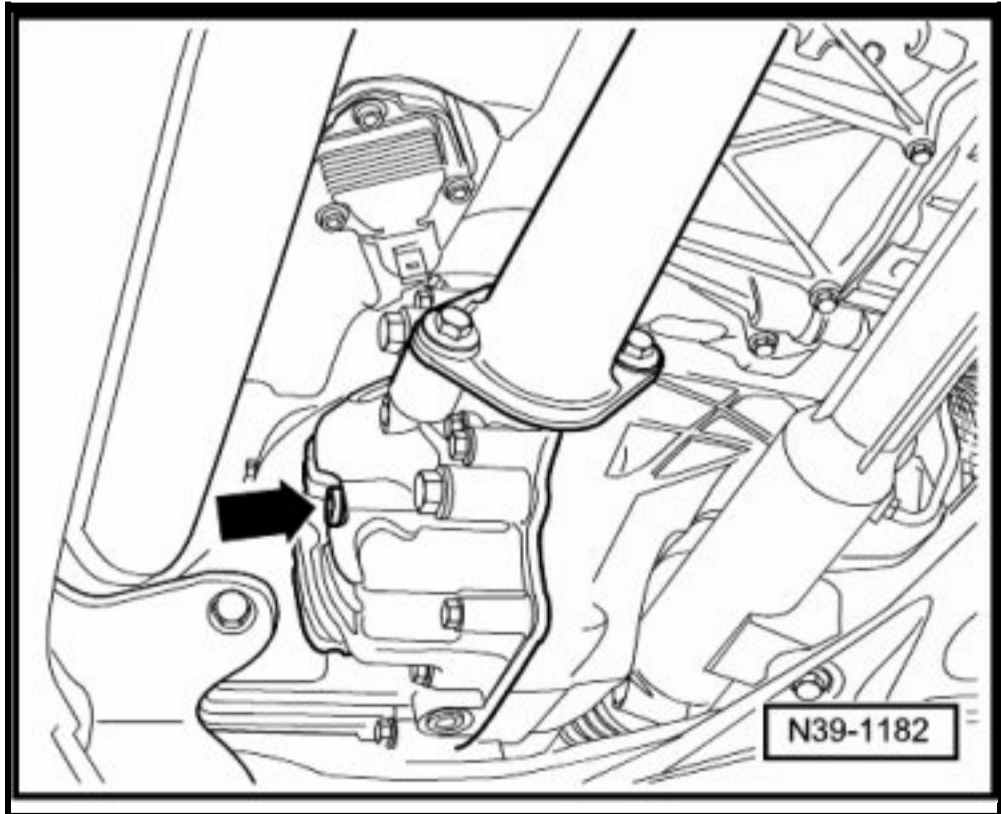

[Zoom](#) [Sized for Print](#)

α Specification: Oil level must reach lower edge of oil filler bore.

- If necessary, top off axle oil; specification. Refer to => Electronic Parts Catalog.
- Screw in bolt - **arrow** - with new seal.

Tightening Specifications	
Oil filler plug to front final drive	35 Nm

Zoom

Sized for Print

[Account](#) | [Vehicle](#) | [Help](#) | [Contact](#) | [AutoZone Community](#) | [Exit](#)

© 2016 ALLDATA, LLC. All Rights Reserved. [Trademarks](#) | [Privacy Policy](#) | [Terms and Conditions](#)