

Account

Vehicle

Help

Search

Contact

AutoZone Community

Exit

Your Vehicle: 2010 Audi Q7 Quattro (4LB) V6-3.0L DSL Turbo (CATA)



SAVE \$25
instantly on 4 tires!

tirebuyer.com

SAVE NOW >

SAVE \$25
instantly on 4 tires!

tirebuyer.com

SAVE NOW >


[Vehicle](#) » [Transmission and Drivetrain](#) » [Differential Assembly](#) » [Fluid - Differential](#) » [Service and Repair](#) » [General Information](#) » [Rear Final Drive Axle Oil Level, Checking](#)

Rear Final Drive Axle Oil Level, Checking

Rear Final Drive Axle Oil Level, Checking

Special tools, testers and auxiliary items required

- ⌘ Torque Wrench (V.A.G 1331)
 - ⌘ Used oil collection and extraction device (V.A.G 1782)
 - ⌘ Refer to general repair instructions. Refer to => [General Repair Information] [See: Service and Repair\Procedures.](#)
 - ⌘ When checking oil level, vehicle must be on a level surface.
-
- Position Used Oil Collecting and Extracting Device (V.A.G 1782) below rear final drive.
 - Remove oil filler bolt - **arrow** - with a hex key.

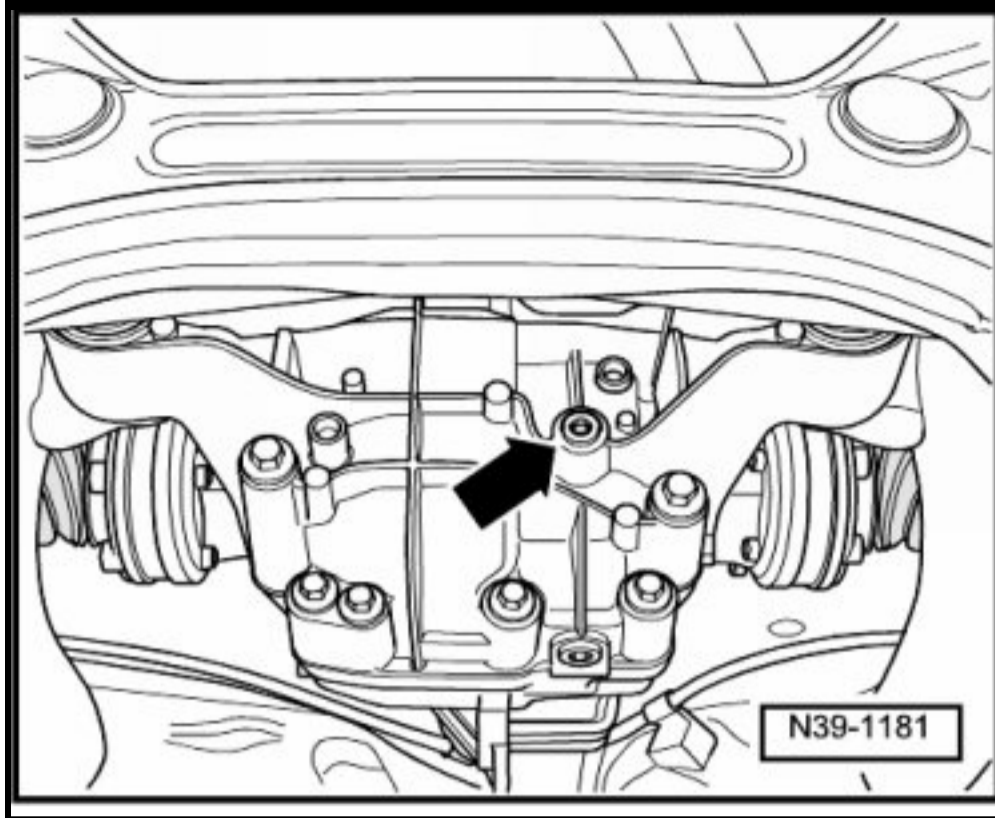

Zoom

Sized for Print

The oil level is correct when the rear final drive is filled to the lower edge of the filler hole.

α The fluid level must be at the bottom edge of the inspection opening.

- If necessary, top off axle oil; specification. Refer to => Electronic Parts Catalog.
- Screw in bolt - **arrow** - with new seal.

Tightening Specifications	
Oil filler plug to rear final drive	35 Nm

Zoom

Sized for Print

[Account](#) | [Vehicle](#) | [Help](#) | [Contact](#) | [AutoZone Community](#) | [Exit](#)

© 2016 ALLDATA, LLC. All Rights Reserved. [Trademarks](#) | [Privacy Policy](#) | [Terms and Conditions](#)