

Account

Vehicle

Help

Search

Contact

AutoZone Community

Exit

Your Vehicle: 2010 Audi Q7 Quattro (4LB) V6-3.0L DSL Turbo (CATA)

Free delivery available

Easy local installation

SAVE \$25
instantly on 4 tires!

tirebuyer.com

SAVE NOW >

[Vehicle](#) » [Body and Frame](#) » [Doors, Hood and Trunk](#) » [Front Door](#) » [Adjustments](#)


Adjustments

Door, Adjusting

Special tools, testers and auxiliary items required

- ✕ Gauge - Gap Adjustment (3371)

Panel Gap Dimensions

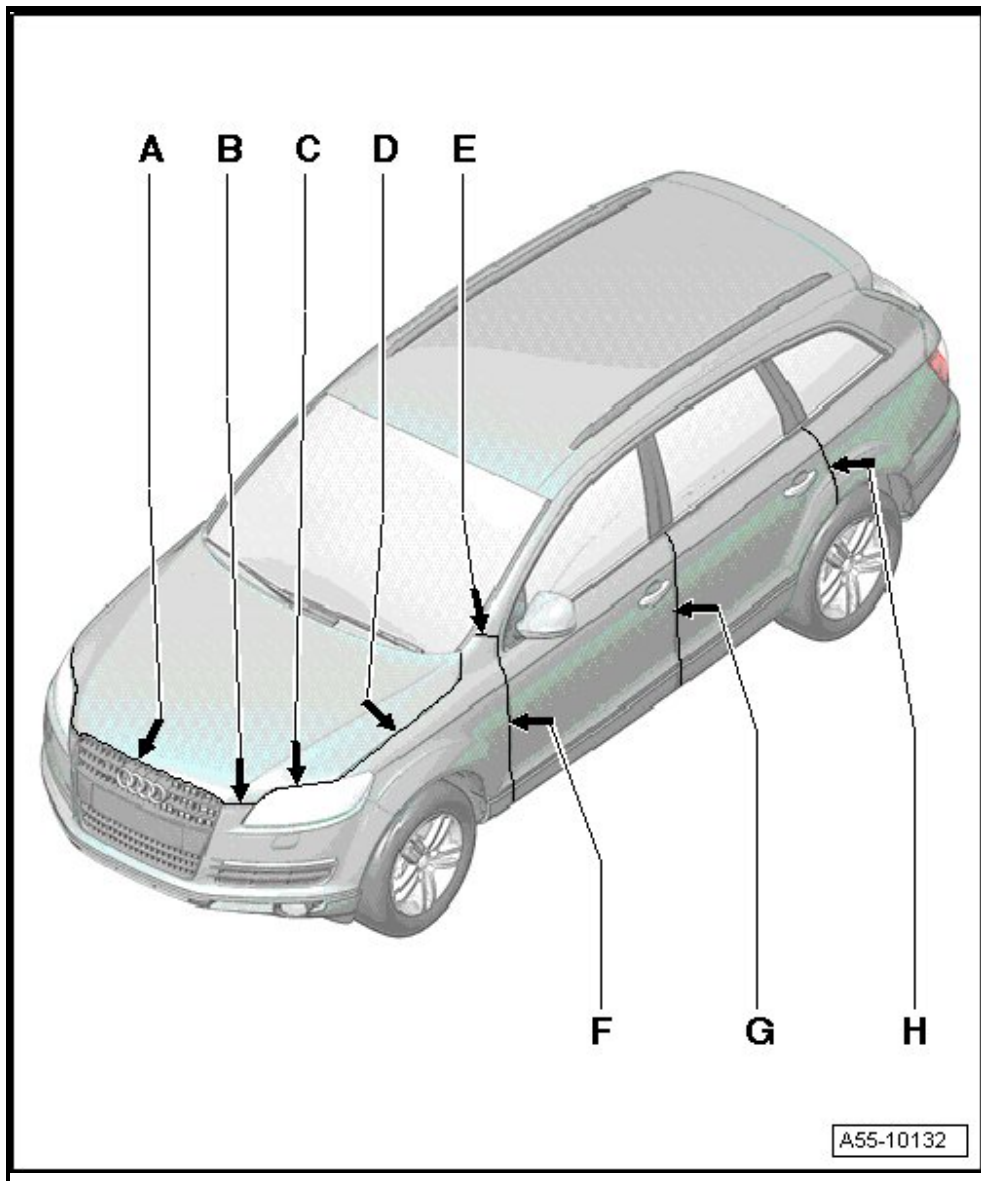

Zoom


Sized for Print

- F - = 3.5 mm

- G - = 4.5 mm

- H - = 3.5 mm

Front Door Adjustment Dimensions

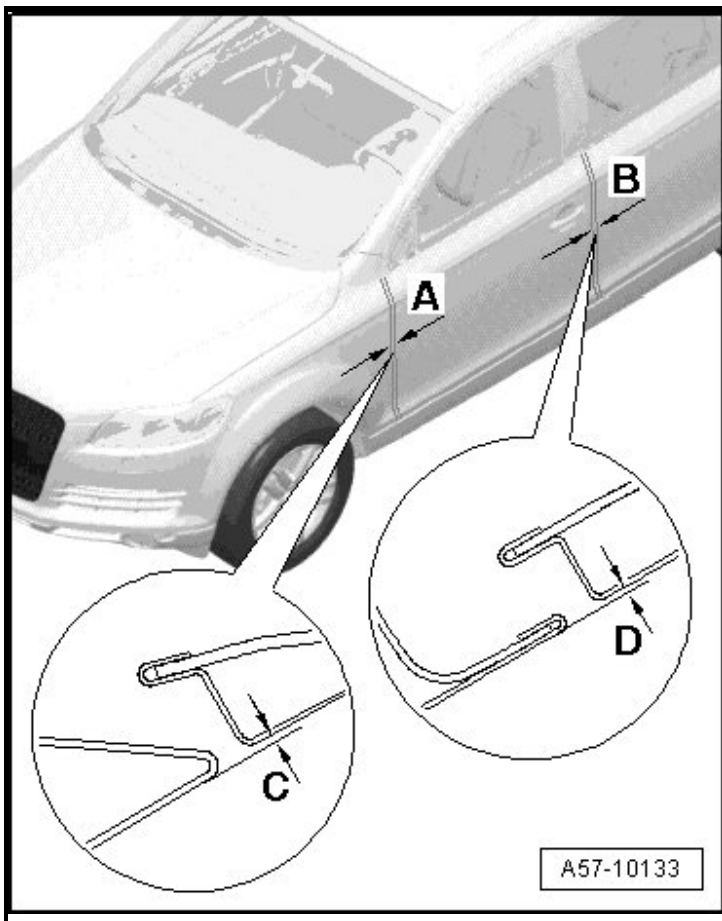

Zoom


Sized for Print

⊠ Rear door must be adjusted.

- Dimension - **A** - = 3.5 mm \pm 0.5 mm
- Dimension - **B** - = 4.5 mm \pm 0.5 mm
- Flush dimension - **C** - =0 mm + 1 mm in parallel position to chassis.

Adjustment in Longitudinal Direction

- Adjustment in longitudinal direction is performed by loosening hinge bolts - **arrow A** - of A-pillar at top of door hinge or/and bottom and sliding doors - **2** - (over-sized holes in hinge or in A- pillar)

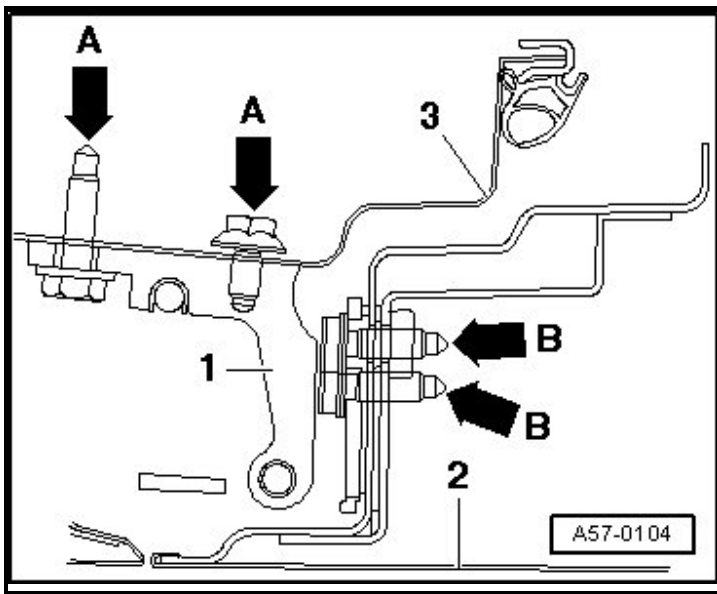

Zoom


Sized for Print

- Tightening specification 32 Nm
- Door hinge - **1** -
- A-Pillar - **3** -
- Door - **2** -

⌘ Illustration shows lower door hinge.

Adjustment to Center of Vehicle


- ⌘ A fitting screw is installed on bottom of door hinge.
- ⌘ When repairing, an adjustment is therefore not necessary under normal circumstances.
- ⌘ If an adjustment should become necessary anyway, fitting bolts can be replaced with bolts of the same size, length and toughness, as listed in replacement parts catalog.
- The adjustment to vehicle center occurs by loosening hinge bolts (- **arrow B** -) at top and/or at bottom of door and shifting the doors (elongated holes in hinge).

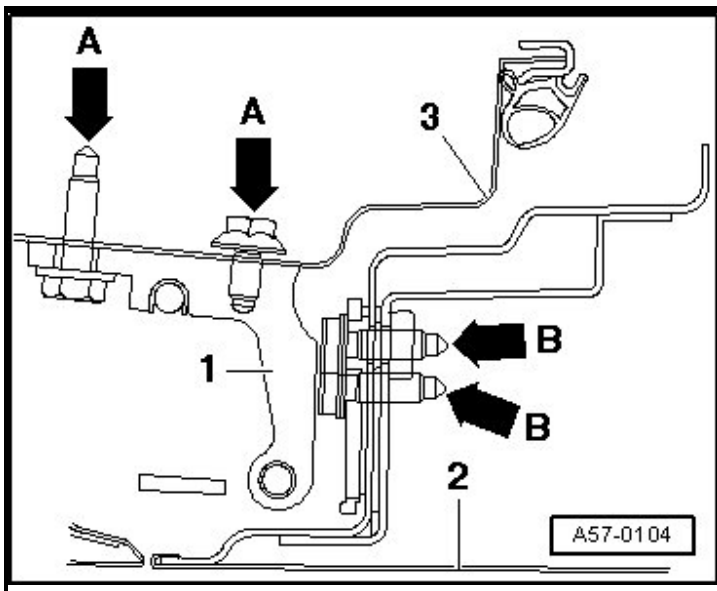

- Tightening specification 32 Nm

⌘ In rear portion of door, adjust door depth (relative to vehicle center) via striker pin.

Adjusting with Striker Pin

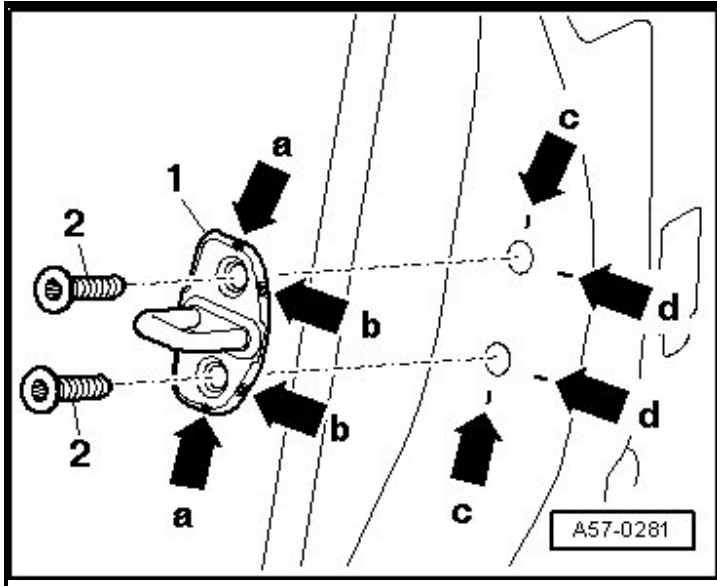

- Loosen bolts - 2 -.
- Use the markings (- **arrows a** - and - **arrows c** -) for side adjustment.
- Slide striker pin - 1 - until door is flush with contour of chassis.

⌘ Door may only be adjusted for depth (towards car interior) and not for height.

- Use the markings (- **arrows b** - and - **arrows d** -) for height adjustment.
- Striker pin must align in door lock center for correct adjustment.
- Tighten screws to 25 Nm.