

Radiator Grille, Removing and Installing

Removing

- Remove the reinforcement brace. Refer to → [Chapter „Reinforcement Brace, Removing and Installing“](#).
- Release the catches -1 and 4-.
- Remove the radiator grille -3- from the bumper cover -2-.
- If the radiator grille is to be replaced, also remove the following components:
 - ◆ Front Airbag Crash Sensor -G283-. Refer to → [Body Interior; Rep. Gr.69; Airbag Crash Sensors; Component Location Overview - Airbag Crash Sensors](#).
 - ◆ Emblem. Refer to → [Chapter „Radiator Grille Name Badges and Emblems, Removing and Installing“](#).

Installing

Install in reverse order of removal.

