


## Reinforcement Brace, Removing and Installing

### Removing

- Remove the front bumper cover. Refer to → Chapter „Bumper Cover, Removing and Installing“.
- If equipped disconnect the washer fluid hose -5- from the night vision system spray nozzle.
- Free up the washer fluid hose -4- for the headlamp washer system.
- Disconnect the connector -1- and antenna wire -6- and free up the wiring harness -3-.
- Remove the bolts -arrows-.
- Remove the reinforcement brace -2- from the radiator grille.

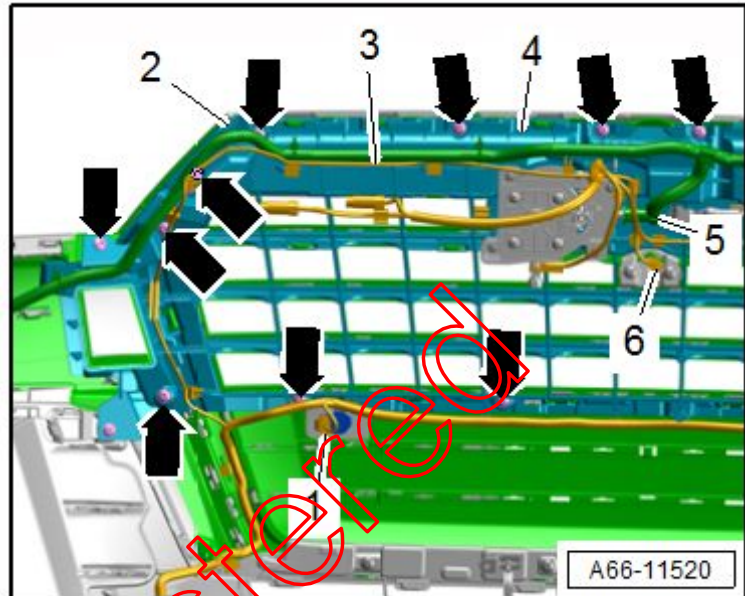

### Installing

Install in reverse order of removal.

### Tightening Specifications

- ◆ Refer to → Chapter „Overview - Radiator Grille“