


Component Location Overview - Infrared System

- 1 - Light Switch -E1- with Night Vision System Button - E680-

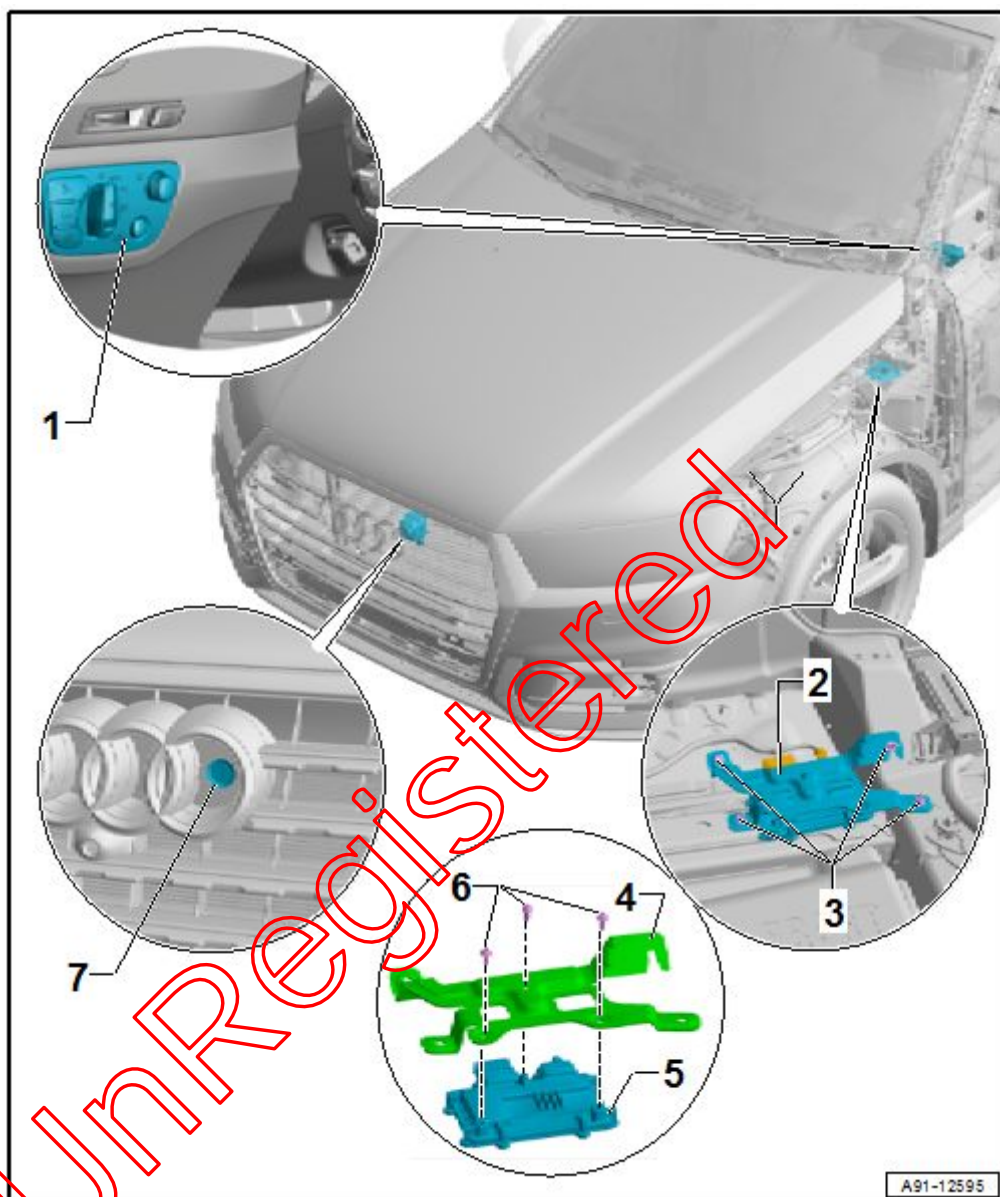

- Removing and installing. Refer to → [Electrical Equipment; Rep. Gr.96; Controls; Component Location Overview - Instrument Panel Controls.](#)

2 - Bracket

3 - Nut

- 3 Nm
- Quantity: 4

4 - Bracket

5 - Night Vision System Control Module -J853-

- Connector Assignment. Refer to → [Wiring diagrams, Troubleshooting & Component locations.](#)
- Removing and Installing. Refer to → [Chapter „Night Vision System Control Module, Removing and Installing“.](#)

6 - Bolt

- 6
Nm

- Quantity: 4

7 - Night Vision System Camera -R212-

- Overview. Refer to → Chapter „Overview - Night Vision System Camera -R212-“.
- Removing and Installing. Refer to → Chapter „Night Vision System Camera, Removing and Installing“.
- Calibration. Refer to → Suspension, Wheels, Steering; Rep. Gr.44; Night Vision System; Night Vision System, Calibrating.

UnRegistered