

Night Vision System Control Module, Removing and Installing

The Night Vision System Control Module -J853- is located in the front left footwell.




Note

If replacing the control module, select the "Replace control module" function for the corresponding control module. Refer to Vehicle Diagnostic Tester.

Removing

- Turn off the ignition and all electrical equipment and remove the ignition key.
- Loosen the front left seat and with the wires still attached and push rearward. Refer to → Body Interior; Rep. Gr.72; Front Seats; Overview - Front Seat.
- Remove the floor mat.
- Remove the sill panel. Refer to → Body Interior; Rep. Gr.70; Vehicle Interior Trim Panels; Overview - Sill Panel Strip.
- Remove the footrest. Refer to → Body Interior; Rep. Gr.70; Vehicle Interior Trim Panels; Overview - Footrest and Carpet.
- Disengage the carpet and push aside.
- Remove the nuts -arrows- from the bracket -1-.
- Release and disconnect the connectors -2- on the Night Vision System Control Module -J853-.
- Remove the Night Vision System Control Module -J853- with the bracket -1-.

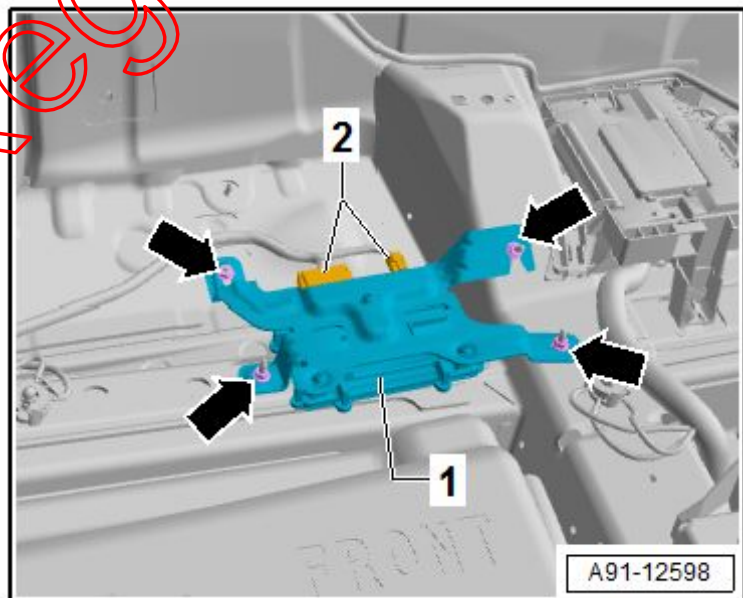


- Remove the bolts -3- and remove the Night Vision System Control Module -J853--1- with the bracket -2-.

Installing

Install in reverse order of removal.

Tightening Specifications

- ◆ Refer to → Chapter „Component Location Overview - Infrared System“

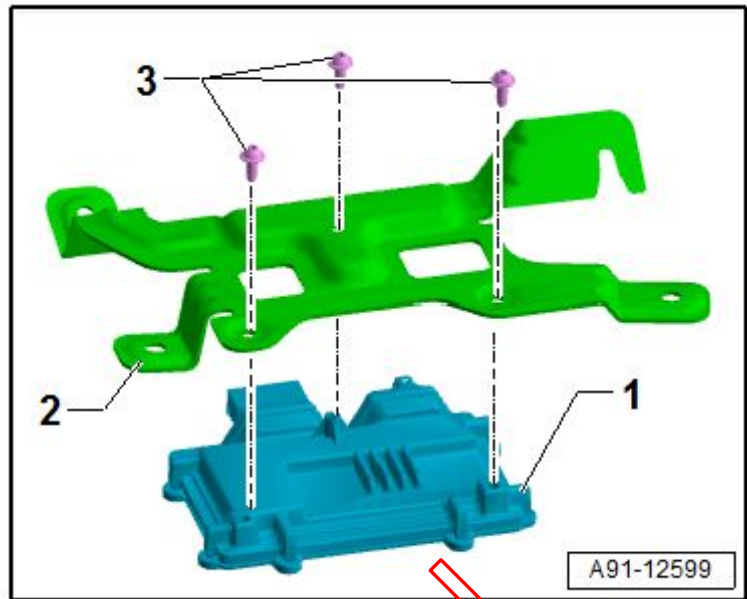

UnRegistered