

### **Passcodes (just in case):**

09 - Central Electrics: 20113

13 - Auto Distance Regulation: 20103

6D - Trunk Electric: 12345

### **Enable Automatic Gear selection shown in DIS**

[02 - Auto Trans] [Adaptation - 10]

Select "Single Gear Display" from top channel drop down menu

Select "D on/S on" from New value drop down menu

### **Disable Auto Start/Stop**

[08 - Air Conditioning] [Adaptation - 10]

A/C comfort param for start/stop function

Change value from 5 -> 0

### **Always engage parking brake when putting in Park**

[03 - Brakes] [Adaptation - 10]

Automatic Parking Brake -> Activated

Security code: 40168 (It was the first in the list of suggestions in OBDEleven and was accepted. Haven't tried others.)

### **Increase Lane Assist warning threshold**

[Frt Sens. Drv. Assist A5] [Adaptation - 10]

UDS Adaptation Channel: IDE05984-Directional stabilization assist driver inact deactiv threshold

Stored Value Medium -> Late

### **Beep when car is unlocked**

[46 - Comfort System] [Adaptation - 10]

Sounder Settings

Beep at opening

beep time opening central locking - Change Value to "single beep"

### **Seat Belt Chime Disable**

[17 - Dashboard]

[Adaptation]

Select "Deactivate Seat Belt Warning"

Set to Yes

Hold down button on the bottom to save