Fixed Rear Seat Backrest, Removing and Installing

1 - Fixed backrest

- Remove rear seat bench → Chapter.
- Remove head restraints → Chapter.
- On vehicles with ski bag, remove ski bag frame → Chapter.
- Remove outer head restraint guides → Chapter.
- Remove center head restraint guides → Chapter.
- Disconnect connectors on vehicles with side airbag → Fig.
- Remove screws -2- (2x).
- Push backrest-1- upward and detach at hooks-3- (4x).
- On vehicles with heated seats and side airbag, disconnect harness connectors.

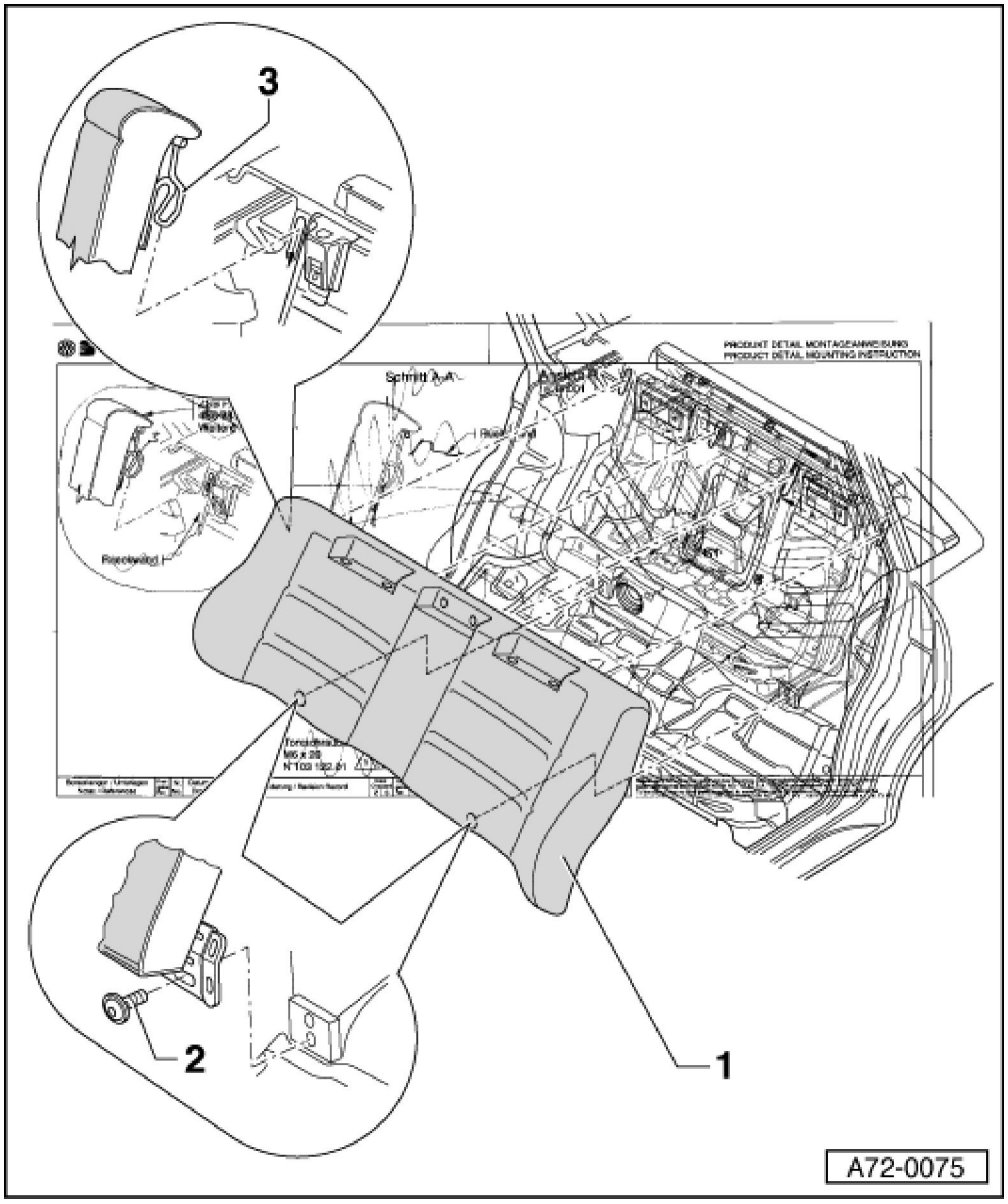

2 - Screws (2x)

- Tightening torque: 8 Nm (71 in. lb)

3 - Hooks (4x)

Disconnecting side airbag harness connector

– Press retainer tab -2- and pull out connector -1- in direction of -arrow-.

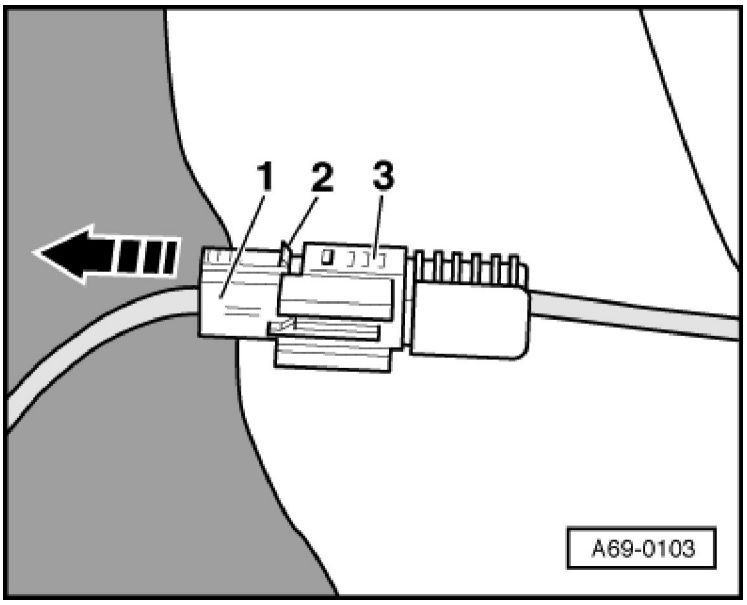
1
2
3
A69-0103