


Take any old credit card and cut it into 4 strips 8mm (5/16") wide.  
Print this template and cut the ends as shown with notches.

Insert into horizontal slots in the factory radio flat side toward  
the outside of the radio (2 needed for single DIN, 4 for double DIN)  
The insertion distance from notch is approximately 14mm (9/16")

Pull the radio straight out. If it doesn't come out easily make sure  
the tools are straight in. If not, push them towards the outside to  
release the tabs.

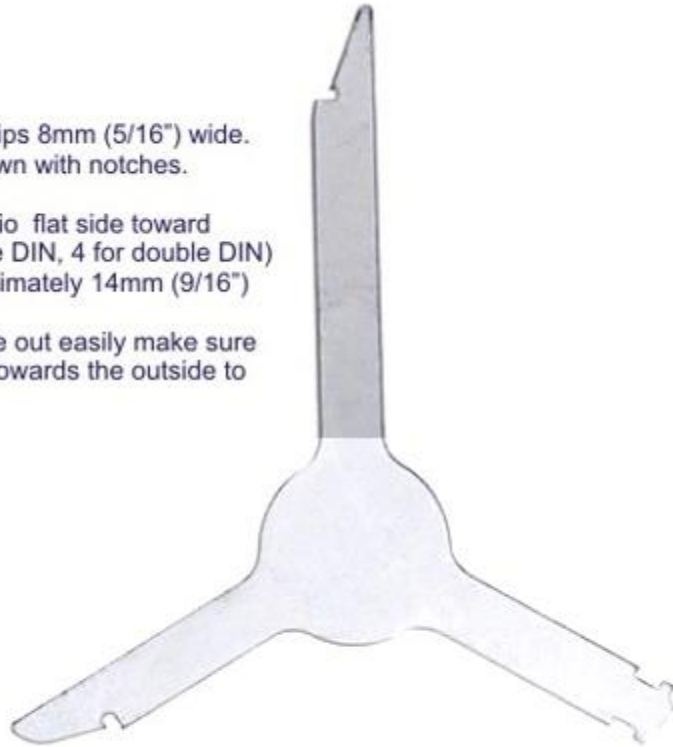

VW Radio Removal Tool  
(Single & Double DIN)