


Audi A6

Current Flow Diagram

No. 1 / 10

Onboard supply control unit, Right side light bulb, Front right turn signal bulb, Right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb

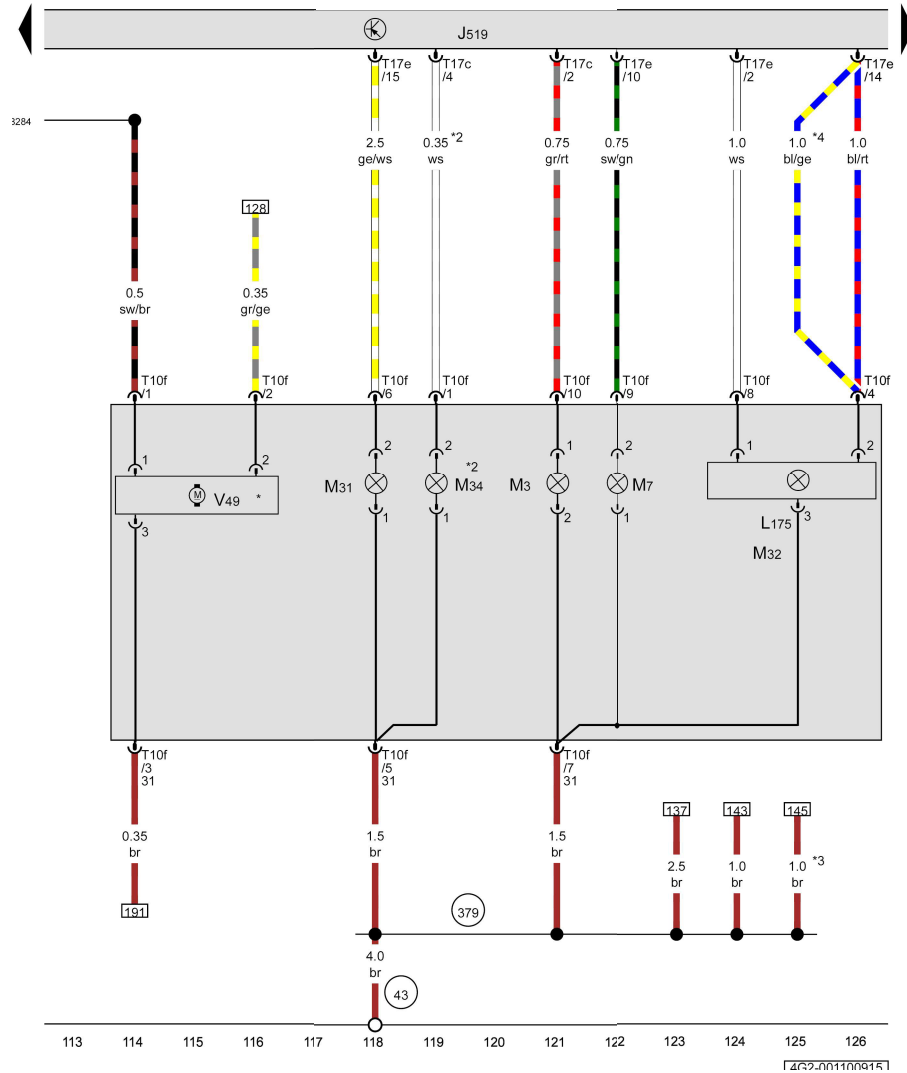

- J519 - Onboard supply control unit
- L175 - Right daytime running light bulb
- M3 - Right side light bulb
- M7 - Front right turn signal bulb
- M31 - Right headlight dipped beam bulb
- M32 - Right headlight main beam bulb
- M34 - Front right side marker bulb
- T10f - 10-pin connector
- T17c - 17-pin connector
- T17e - 17-pin connector
- V49 - Right headlight range control motor
- 43 - Earth point, lower part of right A-pillar
- 379 - Earth connection 14, in main wiring harness
- B284 - Positive connection 8 (15a) in main wiring harness
- * - Only models with headlight range control
- *2 - Only for American markets
- *3 - According to equipment
- *4 - From June 2011

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

113 114 115 116 117 118 119 120 121 122 123 124 125 126