


Audi A6

Current Flow Diagram

No. 52 / 6

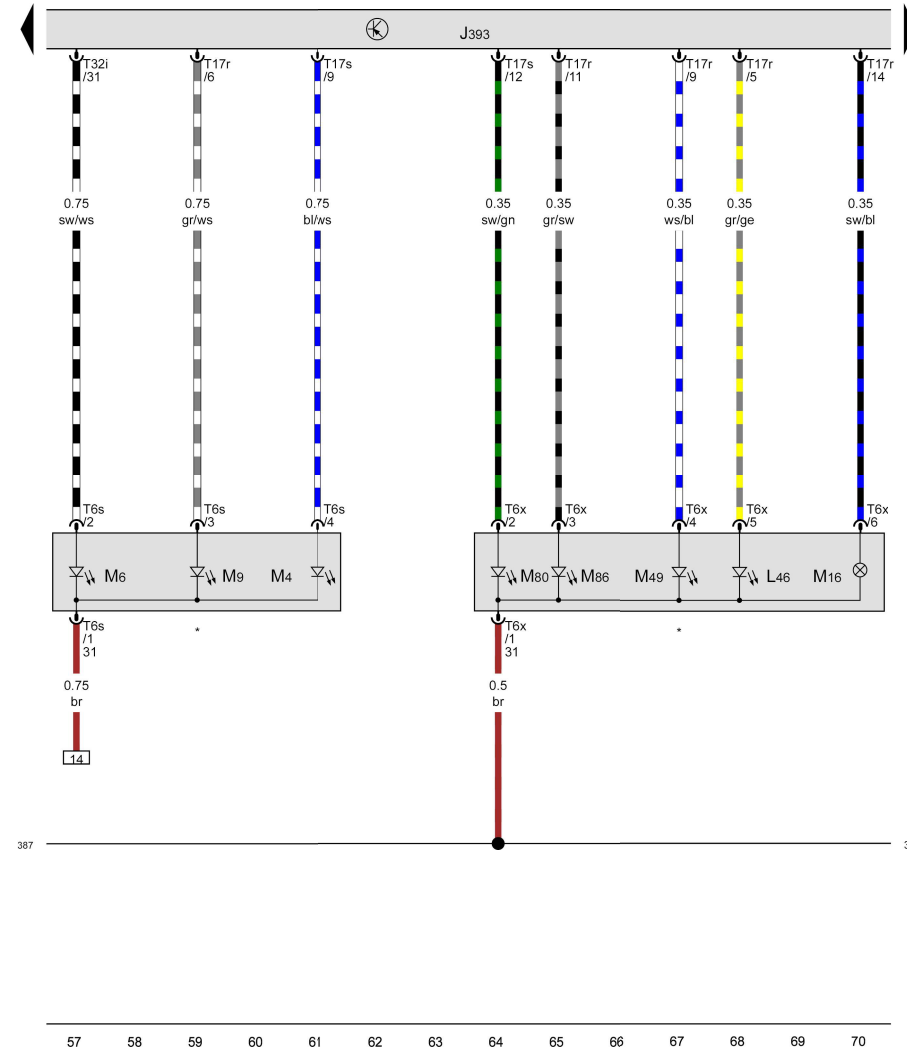

Convenience system central control unit, Left tail light bulb 2, Bulb 2 for rear left turn signal, Left brake light bulb 2


- J393 - Convenience system central control unit
- L46 - Rear left fog light bulb
- M4 - Left tail light bulb
- M6 - Rear left turn signal bulb
- M9 - Left brake light bulb
- M16 - Left reversing light bulb
- M49 - Left tail light bulb 2
- M80 - Bulb 2 for rear left turn signal
- M86 - Left brake light bulb 2
- T6s - 6-pin connector
- T6x - 6-pin connector
- T17r - 17-pin connector
- T17s - 17-pin connector
- T32i - 32-pin connector
- 387 - Earth connection 22, in main wiring harness
- * - Avant

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A6

Current Flow Diagram

No. 52 / 7

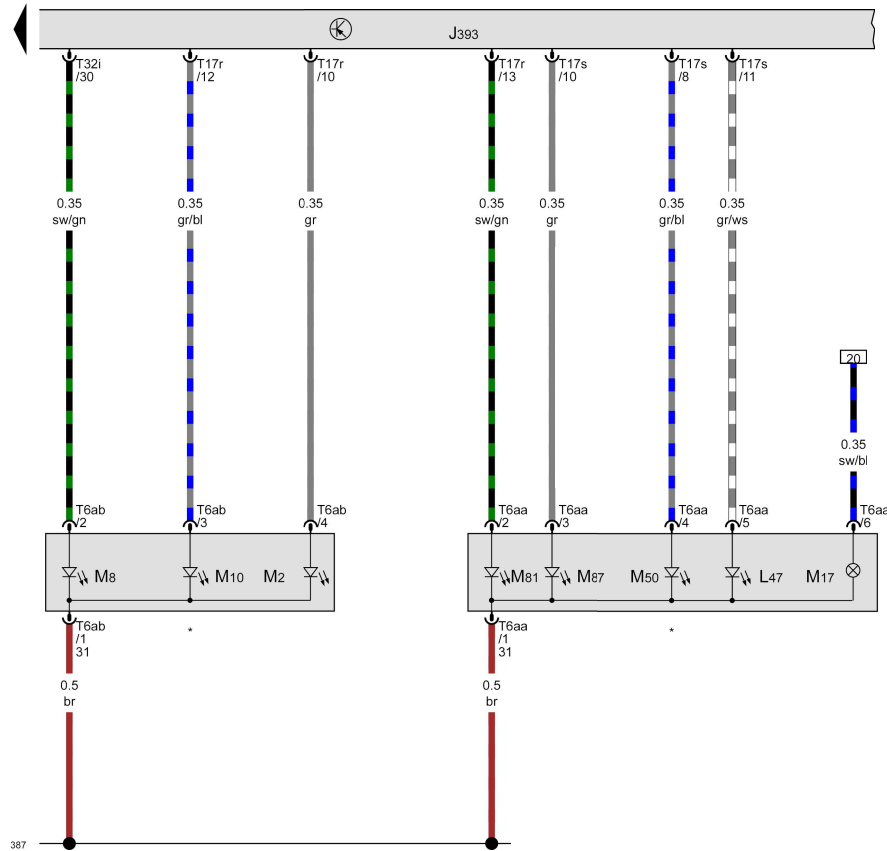

Convenience system central control unit, Right reversing light bulb, Right tail light bulb 2, Bulb 2 for rear right turn signal, Right brake light bulb 2

- J393 - Convenience system central control unit
- L47 - Rear right fog light bulb
- M2 - Right tail light bulb
- M8 - Rear right turn signal bulb
- M10 - Right brake light bulb
- M17 - Right reversing light bulb
- M50 - Right tail light bulb 2
- M81 - Bulb 2 for rear right turn signal
- M87 - Right brake light bulb 2
- T6aa - 6-pin connector
- T6ab - 6-pin connector
- T17r - 17-pin connector
- T17s - 17-pin connector
- T32i - 32-pin connector
- 387 - Earth connection 22, in main wiring harness
- * - Avant

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink