

## Audi > C5 > 1998-2005


### 5 Spd. Automatic Transmission 01V

#### 38 - Oil pan, oil strainer and valve body, removing and installing


### Multi-Function Transmission Range (TR) Switch F125 , removing and installing

#### Removing

- Removing left transmission support ⇒ [Left and right transmission supports, removing and installing](#) .

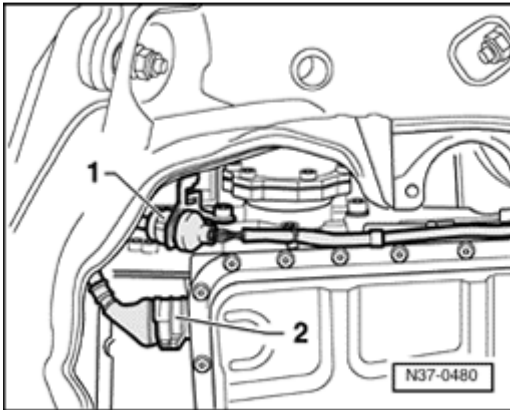


- Disconnect electrical connector - **1** - on Multi-Function Transmission Range (TR) Switch F125 .

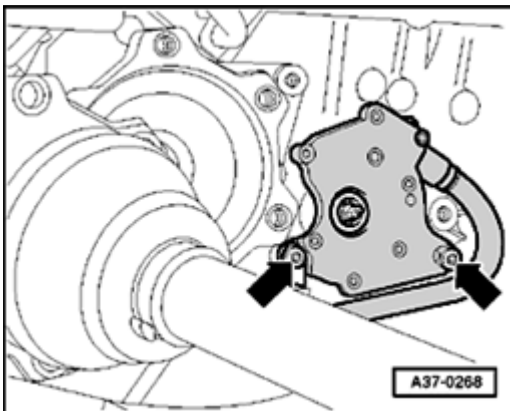

- Remove Multi-Function Transmission Range (TR) Switch F125 - **arrows** - .
- Free up wiring harness and remove Multi-Function Transmission Range (TR) Switch F125 from selector shaft.

#### Installing

Install in reverse order of removal, note the following:

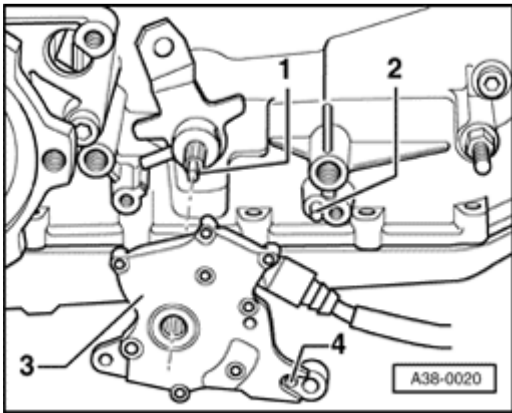

- Connect Multi-Function Transmission Range (TR) Switch F125 to shift rod. Flat part at splines in switch - **3** - must align with flat part of shift rod - **1** - .

**Note:**

\* *Attach Multi-Function Transmission Range (TR) Switch F125 centered on selector shaft. Do not distort and do not use excessive force. This may damage switch contacts.*

- Rotate switch until alignment bore - **4** - at switch housing can be installed on alignment pin - **2** - at transmission housing.

- Install left transmission support ⇒ [Left and right transmission supports, removing and installing](#) .

**Torque specification**

Component	Nm
Multi-Function Transmission Range (TR) Switch F125 to transmission	8